

# PM Hydraulic Requirements

## Section 02-01-05

Komatsu has made effort to make this manual as accurate as possible based on the information available at the time of publication and printing. Continuous improvement and advancement of product design may cause changes to machines, which may not have been included in this publication. Komatsu reserves the right to make changes and improvements at any time. To ensure the most current information, please contact your service center.

## Hydraulic Requirement References

<b>Hydraulic Reservoir Oils – Table 2</b>	Section 02-01-04
<b>Analysis of Hydraulic Pump Drive (HPD) Gearbox Pump Oil.</b>	Section 02-01-04
Cleanliness Target	Section 02-01-04
<b>Component Description</b>	Section 03-04-01
<b>Circuit Description for HPD Gearbox Oil</b>	Section 03-04-01
<b>Removal/Installation Procedures</b>	Section 03-04-01
HPD Gearbox Removal	Section 03-04-01
Shimming for Proper Bearing Endplay	Section 03-04-01
Installation and Alignment of HPD Gearbox to Generator	Section 03-04-01
Completing the Installation (Early Production Models)	Section 03-04-01
<b>Installation and Alignment of Gearbox to Generator - Gen2</b>	Section 03-04-01
<b>General Description of the Loader Hydraulic Systems</b>	Section 04-01-02
<b>Hydraulic System Fundamentals</b>	Section 04-01-02
Delta Temperatures	Section 04-01-02
Cleanliness Targets	Section 04-01-02
<b>Hydraulic Reservoir</b>	Section 04-01-03
Service Facilities of the Hydraulic Reservoir	Section 04-01-03
Fluid Level Sight Gauge	Section 04-01-03
Reservoir Return Filters	Section 04-01-03
Reservoir Drain Valve	Section 04-01-03
Reservoir Filling Facilities	Section 04-01-03
Reservoir Access Panels	Section 04-01-03
Reservoir Heaters (Optional)	Section 04-01-03
Service Requirements and Recommendations	Section 04-01-03
Daily Inspection	Section 04-01-03
Oil Analysis	Section 04-01-03
Reservoir Drain and Refill	Section 04-01-03
<b>Pumps</b>	Section 04-01-03
DRG (Hoist/Bucket)	Section 04-01-03
DRG Control (Fan and Blower)	Section 04-01-03
DRS Control (Steering)	Section 04-01-03
Hydraulic Pump Priming	Section 04-01-03
<b>Piston Pumps</b>	Section 04-01-03
Vane Pumps	Section 04-01-03
Filter Leak Check	Section 04-01-03
Gearbox	Section 04-01-03
<b>Hydraulic Pump Drive (Gearbox) Service</b>	Section 04-01-03

Use Specified Lubricating Fluid	Section 04-01-03
Hydraulic Pump Drive (Gearbox) Service Intervals	Section 04-01-03
Hydraulic Pump Drive (Gearbox) Lubricant Pump Circuit	Section 04-01-03
<b>Main Hoist and Bucket Control Valves (HUSCO)</b>	Section 04-01-03
<b>Multiport Distribution Manifolds</b>	Section 04-01-03
<b>Manual Bleed Valve Assembly</b>	Section 04-01-03
<b>Float Valves</b>	Section 04-01-03
<b>Pilot Circuits</b>	Section 04-01-03
Front Frame Hydraulic Panel	Section 04-01-03
Front Frame Hydraulic Panel Functions	Section 04-01-03
<b>Steering Main Valves</b>	Section 04-01-03
Steering Flow Amplifier Valve (Danfoss Flow Amplifier)	Section 04-01-03
Auxiliary Steering System	Section 04-01-03
Hydraulic System Thermal Control	Section 01-04-03
<b>Hydraulic Oil Cooling Function</b>	Section 04-01-04
Electrical and VCU Logic Controls	Section 04-01-04
Hydraulic Flow	Section 04-01-04
<b>Auxiliary Oil Cooler Control Function</b>	Section 04-01-04
<b>Electrical and VCU Logic Controls</b>	Section 04-01-04
Hydraulic Oil Temperatures	Section 04-01-04
<b>Exceptions</b>	Section 04-01-04
Hydraulic Flow	Section 04-01-04
<b>Hoist and Bucket Pumps Installation</b>	Section 04-01-07
<b>Hoist and Bucket Pump Removal and Installation Procedures</b>	Section 04-01-07
Removal of Hoist and Bucket Pumps	Section 04-01-07
Removal of Hydraulic Gearbox	Section 04-01-07
Installation of Pump	Section 04-01-07
Installation of Gearbox	Section 04-01-07
Installation and Alignment of Gearbox to Generator	Section 04-01-07
Completing the Installation	Section 04-01-07
Steering Valve Removal	Section 04-01-07
Installation	Section 04-01-07
<b>Hydraulic Cylinders (Hoist)</b>	Section 04-01-07
Removal	Section 04-01-07
Installation	Section 04-01-07
<b>Hydraulic Cylinders (Bucket)</b>	Section 04-01-07
Removal	Section 04-01-07
Installation	Section 04-01-07
<b>Hydraulic Cylinder (Steering)</b>	Section 04-01-07
Removal	Section 04-01-07
Installation	Section 04-01-07
<b>Steering Pin Installation</b>	Section 04-01-07
<b>Fluid Power Diagram</b>	Section 04-01-08