

TVL LevelPro Display / Controller

Instructions to display fuel tank percentage

1. Remove the clear protective case to access the control buttons.
2. Press and hold the ESC/MENU button for 3 seconds.
 - a. You will see Relay 1 appear.



3. Press the DOWN Arrow button twice.
 - a. You should see Input appear.



4. Press the ENTER Button
 - a. You will see Type appear.



5. Press the DOWN Arrow 4 times.
 - a. You should see Lo C appear.



6. Press the ENTER Button to set Lo C
 - a. 000.0 appears as the default, and we will keep Lo C as 0



7. Press and hold the ENTER button for 2 seconds.
 - a. You will see SET? Appear



- b. Press the ENTER button to confirm

8. Press the DOWN arrow to get to Hi C



9. Press the ENTER button to set Hi C.

- a. Set Hi C to 669.9 .
- b. Use the UP or DOWN arrows to change the value of each digit. Use the ENTER button to advance to the next digit.
- c. Press and hold the ENTER button for 2 seconds once Hi C is set to 669.9.



10. Press the ESC/MENU button 2 times to return to the home screen.
- a. You should see approximately 100 when the fuel tank is full.