

Index

- 1.7 volt switch supply
 - location 10-799, 10-805
 - 10 volt sensor supply
 - voltage above normal 10-461
 - voltage below normal 10-466
 - 3-point linkage
 - accumulator 16-17
 - control valve 16-13
 - install 16-30
 - manual lowering 16-17
 - operational checks 16-61
 - remove 16-24
 - 3-point linkage accumulator 16-12
 - 3-point linkage components 16-4
 - 3-point linkage control solenoids 16-23
 - 3-point linkage control valve 16-11
 - 3-point linkage control valve solenoid
 - calibrate 16-61
 - 3-point linkage cylinder drift
 - check 16-61
 - 3-point linkage lever position sensor 16-21
 - 3-point linkage lift position sensor 16-21
 - 3-point linkage sensors
 - calibrate 16-66
 - 3-point linkage system 16-5
 - 3-point linkage system introduction 16-3
 - 3-point linkage troubleshooting 16-69
 - 3-point linkage valve
 - directional solenoid 10-1192, 10-1193
 - proportional solenoid 10-1189, 10-1191
 - 3-point linkage valve module ... 10-1174, 10-1178,
 - 10-1183, 10-1184
 - 3.3 volt switch supply
 - location 10-811, 10-817
 - 5 volt sensor supply
 - voltage above normal 10-456
 - voltage below normal 10-458
 - 8 volt supply circuit
 - short-circuit to ground 10-287
 - voltage above normal 10-282
- A**
- accessories belt
 - installing 2-13
 - remove 2-11
 - accessory bar
 - install 11-30
 - remove 11-29
 - accumulator
 - install 16-38
 - remove 16-37
 - troubleshooting 7-83
 - accumulator charge valve 7-91
 - accumulator pressure switch 7-16, 7-93
 - actuator
 - turbocharger 2-341
 - advanced diagnostics
 - enter 12-9
 - agco edt service connector 18-25
 - air cleaner 2-338
 - air compressor
 - install 2-125, 8-7
 - remove 2-122, 8-4
 - air conditioning
 - data results 12-25
 - air conditioning compressor
 - install 12-44
 - remove 12-41
 - air conditioning condenser
 - install 2-85
 - remove 2-82
 - air conditioning receiver/dryer
 - install 2-107, 12-49
 - remove 2-105, 12-46
 - air conditioning system
 - cab pressure 12-4
 - decrease temperature 12-4
 - moisture 12-4
 - refrigerant pump 12-5
 - air control 2-221
 - air control system
 - egr 2-223
 - air coupler
 - install 8-15
 - remove 8-14
 - air dryer
 - install 8-11
 - remove 8-9
 - air dryer purge valve
 - replace 8-31
 - air dryer regeneration valve
 - replacing 8-32
 - air filter
 - clean 11-15
 - engine 2-7
 - air filter assembly
 - install 2-114
 - remove 2-111
 - air pipe 2-350, 2-351
 - air pressure sensor
 - install 8-23
 - remove 8-22
 - air regeneration reservoir 8-25
 - air system components 8-3
 - air system operation 8-3
 - air temperature
 - examine 12-24
 - alternators
 - install 2-17
 - remove 2-14
 - armrest
 - install 11-19
 - remove 11-18
 - armrest 1 18-21
 - armrest 2 18-67
 - armrest module

communication is erratic, intermittent, or not correct	10-398	ballast packages	17-9
articulation bearing		ballast work sheet	17-13
replacing	4-25	guide lines	17-8
articulation position sensor		special application machine recommendations	17-9
calibrate	4-41	ballasting	
install	4-38	general guide lines	17-8
remove	4-35	heavy vertical hitch loads	17-11
articulation sensor	18-78	power hop control	17-8
asbestos	1-7	tire inflation guide	17-16
Auto-Guide™	10-948, 10-955, 10-961, 10-967	tire pressure	17-8
Auto-Guide™ engage switch		weight splits	17-9
location	10-954, 10-960, 10-966, 10-973	base line performance test	12-25
automatic temperature	12-7	batteries	
auxiliary CAN	10-595	install	10-23
auxiliary valve 1		remove	10-22
directional solenoid	10-1071, 10-1072	battery potential	10-186
proportional solenoid	10-1068, 10-1069	before evacuation	12-29
auxiliary valve 2		before operation	1-8
directional solenoid	10-1091, 10-1092	before you start the engine	1-8
proportional solenoid	10-1088, 10-1089	belt line flood lights	18-47
auxiliary valve 3		belt pulley	2-325
directional solenoid	10-1111, 10-1112	belt tensioner	2-324
proportional solenoid	10-1108, 10-1109	bevel gear position	
auxiliary valve 4		set	3-145, 3-169
directional solenoid	10-1131, 10-1132	big-end bearing	2-313
proportional solenoid	10-1128, 10-1129	biodiesel	2-241
auxiliary valve 5		biofuel	2-241
directional solenoid	10-1151, 10-1152	bleed the trailer brakes	7-87
proportional solenoid	10-1148, 10-1149	bluetooth microphone	
auxiliary valve 6		install	11-32
directional solenoid	10-1171, 10-1172	remove	11-32
proportional solenoid	10-1168, 10-1169	boiling temperatures	12-28
auxiliary valve control levers		brake accumulator	
location	10-646, 10-650, 10-654, 10-658, 10-661, 10-665, 10-669, 10-673, 10-676, 10-680, 10-684, 10-688, 10-691, 10-695, 10-699, 10-703, 10-706, 10-710, 10-714, 10-718, 10-721, 10-725, 10-729, 10-733	install	7-35
axle		remove	7-34
air test	3-168	brake accumulator charge valve	
axle introduction	3-3	install	7-32
axle lube sensor		remove	7-31
schematic	10-409, 10-411	brake accumulator switch	
axle lubrication	3-3	install	7-38
axle lubrication filter		remove	7-37
pressure switch	3-17	brake charge filter	
relief valve	3-17	install	7-30
replace	3-165	remove	7-29
axle lubrication filter housing		brake charge filter element	
install	3-68	replace	7-89
remove	3-64	brake pedal switch	3-8
axle lubrication filter specifications	3-177	brake system pressure	
axle lubrication pressure switch specifications	3-177	bleed	7-86
axle lubrication system	3-14	brake troubleshooting	7-81
axle shaft bearings		break in	2-281
assemble	3-91	breather	5-8, 6-59, 7-7, 9-11, 9-165, 16-7
disassemble	3-89	Burn prevention	1-10
shim	3-94		
B		C	
backlash in the pinion shaft		cab	
check	3-154	install	11-7
ballast		remove	11-3
		cab / chassis pass through	18-65
		cab airflow	12-4
		cab filter	
		maintenance	11-14
		cab seat	

install	11-21
remove	11-20
cab unswitched power	18-46
calibrate	
valve sections	9-151
camshaft	2-284, 2-301
camshaft bushing	2-283
camshaft gear	2-301
CAN 10-572, 10-1067, 10-1087, 10-1107, 10-1127, 10-1147, 10-1167, 10-1184	
can data link	5-13, 7-27, 9-28, 16-19
case drain	9-24
cassette seal	
install	3-73, 3-165
remove	3-72, 3-165
category five drawbar	17-7
category four pin	17-7
change	6-55
charge air cooler	
install	2-97
remove	2-89
charge pressure relief valve	
install	6-28
remove	6-27
charge pressure sensor	
install	6-30
remove	6-29
charge pressure sensor circuit	
voltage above normal range	10-207
voltage below normal range	10-211
charge pump	9-21
charging valve	
install	8-21
remove	8-20
check valve 1 (cv1)	7-23, 7-98
circulation	12-4
closed crankcase ventilation	
ccv	2-330
clutch lubricating oil pressure	
test	15-36
collet torque wrench extension	
tooling	14-16
compensator valve	5-35
complete the sequence and calibration process	
valve sections	9-158
compression	12-5
compressor oil	12-33
condenser	
test	12-12
configure and sequence	
valve sections	9-142
connecting rod	2-311, 2-313, 2-316
connector location diagram	
battery group connector location diagram	18-83
cab electrical bottom connector location diagram	18-84
cab electrical top connector location diagram	18-85
front chassis electrical connector location diagram	18-86
rear chassis electrical connector location diagram	18-87
constant flow	5-36
constant torque hose clamps	1-24
control panel	12-7

controller area network 10-572, 10-595, 10-1067, 10-1087, 10-1107, 10-1127, 10-1147, 10-1167, 10-1184	
controller area network (CAN)	
abnormal communication	10-269
signal erratic, intermittent, or not correct ...	10-417
converted pressures	12-28
coolant pump	2-219, 2-333
coolant quality	2-239
coolant specification	2-200
coolant system fluid	2-148
coolant warning	1-11
cooling package	
install	2-27
remove	2-19
cooling system	
flush	2-148
refill	2-149
courtesy lamp	
install	11-37
remove	11-36
crank mechanism	2-214, 2-253
crankshaft	
gear	2-306
hub piece	2-323
oil seal	2-288
crankshaft hub	2-323
crankshaft rework	2-305
cut and crush prevention	1-10
cylinder	
order	2-231
sequence	2-231
cylinder block	2-213
cylinder head	
connection part	2-336
cylinder liner	2-282, 2-284

D

dash cluster	5-13, 9-27, 18-26
dash size	1-24
decel pedal sensor	18-77
decelerator pedal	10-550, 10-552
DEF	
backflow line	10-164
backflow line heater 10-81, 10-82, 10-84, 10-85	
backflow line heater main relay 10-105, 10-106	
defrost time	10-49
direction valve	10-132, 10-134, 10-135
dosing pressure	10-70, 10-71
dosing valve 10-52, 10-54, 10-55, 10-57, 10-58, 10-60, 10-61, 10-164	
heater main relay . 10-141, 10-143, 10-144, 10-152, 10-153	
heating cycle	10-48
pressure	10-69, 10-164
pressure build-up 2-372, 2-373, 2-376, 2-378	
pressure buildup	10-165
pressure drop test failure	10-70
pressure line	10-164
pressure line heater ... 10-96, 10-97, 10-99, 10-100, 10-112, 10-114	
pressure reduction failure	10-165
pressure sensor	10-71, 10-73

pump direction valve	10-146, 10-147, 10-149, 10-150	install	16-55
pump motor	10-121, 10-123, 10-125	remove	16-54
pump motor control power stage ..	10-131, 10-137	drawbar	
pump motor control signal	10-126, 10-128, 10-129	install	17-5
pump temperature signal	10-138, 10-140	remove	17-3
pump-dosed quantities balance error	10-70	drive pinion	
suction line heater	10-75, 10-76, 10-78, 10-79	assemble	3-149
suction line heater main relay	10-103	disassemble	3-110
suction line heater relay	10-102	install	3-161
supply module ..	10-87, 10-88, 10-90, 10-91, 10-93, 10-94, 10-108, 10-109, 10-111	remove	3-108
system emptying	10-71	drive train hydraulic schematic	18-9
tank heater	10-63, 10-64, 10-66, 10-67	E	
tank level sensor	10-39, 10-40, 10-42, 10-43	ecm power	18-64
temperature sensor	10-45, 10-46	ecu	2-388
DEF approved containers	2-197	ECU	
DEF heater circuit fuses	2-197	EDT	2-262
DEF storage and shelf life	2-197	engine log	2-262
DEF tank	2-197	service tool	2-262
desiccant cartridge		type plate	2-205
replace	8-31	egr	
destroke	5-37	actuator	2-347
diesel exhaust fluid		EGR	
def	2-225	actuator	2-346, 2-347
diesel exhaust fluid system		EGR cooler	2-350, 2-351
install	2-175	electric water valve	
remove	2-173	install	12-57
diesel exhaust fluid tank	2-197	remove	12-55
differential		electrical components of park brake system	7-25
exploded view	3-108, 3-130	electrical service tools	10-19
differential bearing preload		electrical storm	1-7
set	3-145, 3-169	electrical system troubleshooting	10-38
differential half-housing		electrical system voltage	
assemble	3-130	below normal range	10-186
disassemble	3-121	electronic control unit	
differential lock	3-3	ecu	2-228
differential lock schematic	10-216, 10-218, 10-220	electronic controls	6-7
differential lock solenoid	3-9	electronic diagnostic tool	
differential lock solenoid valve		components	2-260
assemble	3-63	edt	2-259, 2-260
disassemble	3-62	electronic HVAC controls	12-4
install	3-64	electronic steering - priority valve - left turn	5-29
remove	3-61	electronic steering - priority valve - right turn	5-27
differential lock switch	3-8	electronic steering system - left-hand turn	5-19
differential lock system		electronic steering system - right-hand turn	5-21
diagram	3-6	empty ecu	2-389
electrical components	3-7	engine	
hydraulic components	3-10	install	2-140
differential studs		maintenance	2-266, 2-273
install	3-164	remove	2-131
differential unit		service	2-266, 2-273
install	3-141	engine ab switch	18-40
remove	3-120	engine control module	18-39
disassemble	4-14	engine control module 1	18-24
dismount the machine	1-7	engine control module 2	18-38
disposal of waste	1-17	engine control system	2-228
distribution unit	2-336, 2-337	engine cover	
dome lamp	10-1262	assemble	13-11
dome lamp bulb		disassemble	13-5
replace	11-35	install	13-30
dosing module	2-227	remove	13-3, 13-19
downdrift switch		engine cover - my16	
location	10-876, 10-882, 10-888, 10-895	assemble	13-25
draft arm		disassemble	13-20

engine derating 2-154

engine log
 ECU 2-262
 EDT 2-262
 service tool 2-262

engine maintenance
 chart 1-19

engine module
 communication 10-225
 erratic, intermittent, or not correct 10-392
 intermittent or no communication 10-220

engine mounts
 install 2-110
 remove 2-109

engine output
 fuel quality 2-243

engine overview 2-208

engine serial number 2-204

engine software
 update 2-281

engine specifications 1-22

engine speed switch A 10-761, 10-767, 10-771, 10-775

engine speed switch A/B
 location ... 10-766, 10-770, 10-774, 10-779, 10-783,
 10-787, 10-792

engine speed switch B 10-780, 10-784, 10-788

engine starter motor relay
 current above normal range 10-279
 current below normal range 10-276
 voltage above normal range 10-273

engine troubleshooting 2-150

engine type 2-203

engine wiring harness 2-391

engine wiring harness of the actuators 2-392

equipment 1-7

exhaust and nox sensor 18-37

exhaust fumes 1-13

exhaust manifold 2-339

exhaust pipe 2-338

exhaust system
 install 2-193
 remove 2-190

exhaust system with the diesel exhaust fluid system ..
 install 2-184
 remove 2-178

exploded view
 differential 3-108, 3-130

extremity arms
 install 13-56
 remove 13-56

F

fan
 install 2-120
 remove 2-117

fan control 18-41

fill 2-197

fill capacities 1-18

final drive
 assemble 3-100
 disassemble 3-79
 install 3-76
 remove 3-74

final drives 3-3

finalize the wiring harness replacement
 Challenger MT800E 2-400

fire and explosion prevention 1-14

fire extinguisher 1-15

flash the software
 valve sections 9-154

flood and hazard switch 18-49

flood lamp switch 10-1246

fluid penetration 1-12

flywheel 2-235, 2-317

flywheel housing 2-213, 2-288

four-bolt split flange 1-24

frame repair 4-33

front and rear lighting 18-28

front and rear washer 18-79

front axle
 install 3-22

front distribution unit 2-337

front drive shaft
 assemble 6-38
 disassemble 6-38
 install 6-39
 remove 6-37

front lighting ecu 18-33

front lighting module address 10-1196

front weights
 install 17-23
 remove 17-21

front work lamps 10-1198, 10-1201

fuel / water separator
 install 2-170
 remove 2-168

fuel cooler
 install 2-88
 remove 2-86

fuel feed pressure 2-354

fuel filter
 change 2-7

fuel level sensor
 voltage too high 10-166
 voltage too low 10-169

fuel line sensor 18-42

fuel lines
 install 2-161
 remove 2-158

fuel quality
 engine output 2-243

fuel quality requirements 2-239

fuel specifications
 specifications 2-200

fuel system 2-223

fuse
 test 10-20

fuse block 2 18-29

fuse block one 10-33

fuse block two 10-34

Fuse panel 10-35, 10-36

G

gear pump
 assemble 5-45, 9-41
 disassemble 5-42, 9-38
 install 5-48, 9-44
 remove 5-39, 9-35

gear selector 7-27
 general hazard information 1-6
 general troubleshooting information 12-6
 grinding valves 2-293
 guidance 18-32

H

hand throttle
 location 10-591, 10-594
 hand throttle lever position sensor 10-588, 10-592
 hazard lamp switch 10-1250
 headlamp
 install 10-27
 remove 10-25
 headlamp high beam 10-1222, 10-1224
 headlamps - my16
 install 10-30
 remove 10-29
 headland management switch 9-29, 16-20
 heated mirrors 18-53
 heating and air conditioning troubleshooting 12-60
 heating system
 increase temperature 12-4
 high pressure cutoff
 test 9-134
 High pressure lines 1-11
 high pressure stall
 test 9-133
 high pressure standby test 9-129
 high slip 10-948
 high-pressure pump 2-361, 2-362
 high-pressure turbocharger 2-350, 2-351
 hitch
 raise 10-524
 switch 10-524
 hitch control valve
 hold position 16-14
 lower position 16-15
 raise position 16-16
 hitch lever position sensor
 location 10-619, 10-622, 10-626, 10-629
 hitch operations 5-12, 9-26, 16-18
 hitch raise/lower switch
 location ... 10-977, 10-981, 10-984, 10-988, 10-991,
 10-994, 10-998
 HLA
 hydraulic lash adjuster 2-296, 2-298
 hydraulic lash adjustment 2-296
 hood harness and courtesy lamp 18-50
 hood lighting 18-48
 hub and collet
 install 14-26
 remove 14-25
 hub spacing 14-23
 hvac deluxe module 18-45
 hvac high pressure switch 18-44
 HVAC system 12-4
 hydralaulic oil temperature
 above normal 10-357
 hydraulic 5-8, 7-7, 7-8, 9-11, 9-12, 16-7
 hydraulic connector 2-370
 hydraulic control levers 9-26
 hydraulic control valve
 assemble 9-101

cut away 9-32
 disassemble 9-96
 exploded view 9-31
 hydraulic control valve bank
 assemble 9-95
 disassemble 9-94
 hydraulic control valve module
 calibration 9-140
 installation 9-140
 repair 9-140
 replacement 9-140
 hydraulic control valves 9-16
 hydraulic lash adjuster
 HLA 2-296, 2-298
 hydraulic lash adjustment
 HLA 2-296
 hydraulic oil
 warm 9-127, 16-60
 hydraulic oil filter manifold (steering - implement)
 install 5-92, 9-76
 remove 5-88, 9-73
 hydraulic oil filters
 replace 5-115
 hydraulic oil reservoir
 assemble 5-83, 7-68, 9-67
 disassemble 5-79, 7-64, 9-63
 install 5-86, 7-71, 9-71
 remove 5-76, 7-61, 9-61
 hydraulic oil reservoir breather
 replace 5-117
 hydraulic oil switch 18-76
 hydraulic oil temperature sensor
 voltage above normal 10-360
 voltage below normal 10-363
 hydraulic power beyond 9-24
 hydraulic pump (implement) 5-34
 hydraulic troubleshooting 9-169

I

implement and steering system fluid level
 change 9-162
 check 9-162
 implement control valves - drawbar configuration
 removing 9-84
 implement electronic control system 9-5
 implement filter bypass switch 5-14, 9-15
 implement filters
 replacing 9-165
 implement hydraulic operation
 check 9-139
 implement hydraulic pump 5-5, 7-5, 9-15, 16-10
 implement hydraulic schematic 18-3
 implement hydraulic system 9-7
 implement hydraulic system components 9-10
 implement hydraulic system introduction 9-3
 implement oil cooler
 install 2-59, 9-114
 pressure test 6-54, 9-159
 remove 2-50, 9-105
 implement oil cooler bypass valve
 install 9-123
 remove 9-121
 test 5-103, 9-160
 implement oil filter 9-14

implement oil filter bypass switch
 signal not within range 10-369

implement oil filter bypass switch sensor
 signal not within normal range 10-366

implement solenoids 18-27

implement system 9-4

implement system control settings 9-9

implement valve configuration schematic (3-point linkage) 18-7

implement valve configuration schematic (drawbar)
 18-5

implement valve pilot pressure
 test 9-139

inch fasteners 1-24

inching pedal position sensor
 signal not within normal range 10-299
 signal not within range 10-238

inching pedal sensor
 input readings 10-234
 voltage above normal 10-291
 voltage below normal 10-295

inching pedal switch
 input readings 10-234
 location ... 10-232, 10-236, 10-240, 10-293, 10-297,
 10-302

Inching pedal switch
 signal erratic, intermittent, or not correct ... 10-230

information messages 1-4

injector 2-357, 2-359

inlet manifold 2-340

inlet pipe 2-338

input drive shaft
 assemble 6-41
 disassemble 6-41
 install 6-42
 remove 6-40

input speed sensors
 remove 6-33

install
 actuator wiring harness 2-399
 air conditioning condenser 2-85
 air conditioning receiver/dryer 2-107, 12-49
 alternators 2-17
 engine mounts 2-110
 engine wiring harness 2-396
 fuel cooler 2-88
 injector overflow pipe 2-357
 primary fuel filter 2-165
 radiator core 2-43
 secondary fuel filter 2-168

install the primary air filter 11-15

installing
 accessories belt 2-13
 load sense blocking valve 5-97, 9-82
 rear axle 3-30

installing the implement control valves - 3-point linkage configuration 9-91

installing the implement control valves - drawbar configuration 9-87

interstage charge air cooler
 icac 2-222, 2-348

iso implement connector 18-31

iso service connector 18-30

K

key start switch 18-66

key switch battery potential 10-1054, 10-1058,
 10-1074, 10-1078, 10-1094, 10-1098, 10-1114,
 10-1118, 10-1134, 10-1138, 10-1154, 10-1158,
 10-1174, 10-1178

L

left front fender
 install 13-52
 remove 13-49

left rear fender
 install 13-46

left-hand carrier
 assemble 3-141
 disassemble 3-119
 install 3-146
 remove 3-115

left-hand low beam headlamp 10-1214, 10-1216

left-hand turn 5-34

left-hand turn signal lamps 10-1233, 10-1235, 10-1284,
 10-1287

license plate lamp 10-1264, 10-1267

lift arm
 install 16-44
 remove 16-42

lift cylinder
 install 16-52
 remove 16-50

lift cylinders 16-12

lift link
 install 16-40
 remove 16-39

lifting the engine 2-206

link rod 2-347

load sense blocking valve
 installing 5-97, 9-82
 remove 5-94, 9-79

load sense relief valve
 adjust 9-138

load sense relief valve for the steering valve
 adjust 5-100

load sensing relief valve 9-23

long block 2-262

long block replacement 2-266, 2-273

low def level 2-198

low pressure standby 5-36

low pressure standby test 9-128

lower articulation joint
 connect 4-19
 disconnect 4-12

lubricant viscosities 1-18

lubricant viscosities for ambient temperatures 1-18

lubrication filter pressure switch
 install 3-72
 remove 3-71

lubrication system 2-215, 2-237

M

machine data configuration 10-760

machine lighting
 test 13-58

machine prepared	
troubleshooting	12-6
machine specifications	1-30
magnets	5-8, 7-8, 9-12, 16-7
main air reservoir	
install	8-13
remove	8-12
main fuse	10-37
main fuse panel	10-32
main power relay	10-1256, 10-1259
maintenance	2-262
maintenance schedule	1-20
major maintenance	
support the engine	2-263
manifold gauge	
install	12-23
remove	12-38
test procedure	12-13, 12-24
manifold gauge set	12-23
manifold gauge set reading	
air in the system	12-15
compressor malfunction	12-19
condenser malfunction	12-18
excessive air or moisture	12-16
expansion valve stuck closed or plugged	12-17
expansion valve stuck open	12-21
Low refrigerant charge	12-14
system high pressure side restriction	12-20
system over charge	12-18
thermostatic switch malfunction	12-22
manual lowering	16-17
manual pull valve (mp1)	7-23, 7-99
manual water valve	
install	12-53
remove	12-50
margin pressure - high flow pump	
adjust	9-132
test	9-131
margin pressure - standard pump	
adjust	9-130
test	9-129
maximum power switch	
location	10-607, 10-611, 10-616
metric bolt and cap screws	1-27
metric fasteners	1-27
mirror switch	18-54
module harness	
voltage below normal range	10-179
module power relay	10-1253
moisture	12-27
mount the machine	1-7

N

needle bearing half-housing	
assemble	3-134
disassemble	3-124
neutral position	5-32
noise prevention	1-14
NOx	
conversion	10-163
NOx sensor	
downstream	10-155-10-158
upstream	10-159-10-162

O

O-ring face seal (ORFS) fittings	1-24
oil cooler	2-217, 2-329
oil cooler bypass valve	9-23
oil drain plugs	5-8, 7-8, 9-12, 16-7
oil filter	2-217, 2-331
oil level switch	
schematic	10-406
oil pressure regulating valve	2-326
oil pump	
oil pressure regulating valve	2-216
oil quality	2-239
oil sampling valve	3-13
oil specification	2-200
oil sump capacity	2-330
oil sump gasket	2-329
oil temperature sensor	5-9, 7-9, 9-13, 16-8
Oil warning	1-11
one touch switch	
location	10-902, 10-908, 10-914, 10-921
One-Touch switch	3-8
operator present switch	
location	10-603
operator station	1-9
output speed sensor 2	
signal not within normal range	10-471
output speed sensors	
install	6-36
remove	6-35

P

park brake	
assemble	3-155
disassemble	3-111
park brake valve	7-19, 7-95
park brake valve - engaged	7-20
park the machine	1-9
parking brake operation	7-4
parking brake pressure switch	
install	7-46
motion while engaged	10-411, 10-414
remove	7-46
signal not within normal range	10-411
parking brake solenoid 1	
current above normal	10-256
current below normal	10-253
voltage above normal	10-250
parking brake solenoid 2	
current below normal	10-244
voltage above normal	10-242
parking brake solenoid 2 circuit	
current above normal	10-247
parking brake valve	
install	7-43
remove	7-41
parking brake valve - released	7-21
parking brake valve - released with a non-operating engine	7-22
parking brake wear indicator	
install	7-45
remove	7-44
pilot operated check valve (pc1)	7-24, 7-100
pinion bearing preload	

set 3-152, 3-173

pinion position
 set 3-151, 3-172

piston
 cooling nozzle 2-327
 piston pin bushing 2-312

piston pin 2-315

piston rings 2-311

pneumatic supply pressure 10-1270, 10-1273,
 10-1276, 10-1279

porch and flood lights 18-51

position of electronic components for the parking brake
 system 7-27

position of the hydraulic test ports 9-127, 16-60

power management switch
 location 10-558, 10-562, 10-566, 10-571

power strip 18-56

power take-off (PTO)
 electronic components 15-3

power take-off (PTO) clutch pressure
 test 15-36

power take-off (PTO) solenoid
 current above normal 10-446
 voltage above normal 10-440

power take-off (PTO) system
 introduction 15-36

power take-off (PTO) system modulating valve
 install 15-5

power take-off clutch assembly
 install 15-26
 remove 15-21

power take-off drive shaft
 assemble 15-14
 disassemble 15-13
 install 15-16
 remove 15-6

power take-off gearbox
 install 15-32
 remove 15-30

power take-off speed sensor 10-390

power take-off switch
 location . 10-633, 10-636, 10-639, 10-643, 10-1001,
 10-1004, 10-1008

power train fluid 6-55

power train fluid level - daily
 check 6-55

prefilter
 change 2-7

prepare the machine 9-125, 16-58

prepare the pump for service 3-59

prepare the wiring harness removal
 Challenger MT800E 2-390

pressure control valve
 pcv
 pressure control valve 2-366

pressure reducing valve 9-33

pressure sensor 2-367

pressure-temperature chart 12-25

pressurized air 1-7

primary air filter
 remove 11-14

primary fresh air
 filter 11-14

primary fuel filter
 install 2-165

remove 2-163

primary planetary carrier
 assemble 3-100
 disassemble 3-87

prime 2-172

procedures for operation 1-8

program memory . 10-1063, 10-1083, 10-1103, 10-1123,
 10-1143, 10-1163, 10-1183

proper disposal of waste 1-17

proprietary network
 interrupted or not correct 10-265
 signal erratic, or not correct 10-259
 signal interrupted 10-262

public road transportation 1-15

Q

quick hitch
 install 16-36
 remove 16-35

R

radar 18-57

radiator core
 install 2-43
 remove 2-34

radio and speakers 18-58

radio bezel assembly
 assemble 11-34
 disassemble 11-33
 install 11-35
 remove 11-33

rail 2-364, 2-365

raise - lower switch 16-22

raise - work switch 16-22

raise work switch 18-19

re-torque the wheel and counterweight 14-15

rear articulation drive shaft
 assemble 6-45
 disassemble 6-45
 remove 6-43

rear axle
 install 3-30

rear distribution unit 2-336

rear drive shaft
 assemble 6-49
 disassemble 6-48
 installing 6-51
 remove 6-47

rear hitch 18-68

rear hitch lower switch 10-989, 10-992, 10-995

rear hitch position sensor
 information not correct 10-384
 no information 10-384
 out of calibration 10-388
 signal frequency is not within normal range
 10-380
 signal is above normal range 10-373
 signal is below normal range 10-376

rear hitch raise switch . 10-974, 10-978, 10-982, 10-985

rear hitch steer position sensor 10-528, 10-531,
 10-534, 10-537

rear lighting 18-71

rear lighting ecu 18-34
 rear lighting module address 10-1282
 rear mounted flood lamps 10-1227, 10-1230
 rear pto switch 18-18
 rear reverse lamps 18-61
 rear working lights 18-52
 recirculation filter
 install 11-16
 remove 11-16
 recovery 12-26
 refrigerant
 add 12-37
 contamination 12-26
 recovery 12-26, 12-31
 refrigerant leak
 leak detector 12-32
 test with dye 12-32
 refrigerant recovery tools 12-31
 refrigerant system
 flush 12-32
 regeneration reservoir
 install 8-19
 remove 8-17
 relay and fuse panel for chassis 10-36
 remote steer 18-60
 remove
 accessories belt 2-11
 air compressor 8-4
 air conditioning condenser 2-82
 air conditioning receiver/dryer 2-105, 12-46
 alternators 2-14
 cooling package 2-19
 engine wiring harness 2-392
 engine wiring harness of the actuators 2-392
 flywheel 2-317
 flywheel housing 2-288
 fuel cooler 2-86
 injector overflow pipe 2-356
 primary fuel filter 2-163
 secondary fuel filter 2-166
 removing the implement control valves - 3-point linkage
 configuration 9-89
 repair the frame by adding weld material and machining
 4-34
 replace 2-262
 replace the wear plates 17-7
 replacement parts 1-7
 results of pressure on water boiling points 12-27
 reverse alarm 10-1302, 10-1305
 reverse lamps 10-1302, 10-1305
 right front fender
 install 13-39
 remove 13-36
 right rear fender
 remove 13-32
 right-hand carrier
 assemble 3-143
 disassemble 3-117
 right-hand low beam headlamp 10-1218, 10-1220
 right-hand turn 5-33
 right-hand turn signal lamps 10-1237, 10-1239,
 10-1290, 10-1293
 roading lockout switch
 location 10-928, 10-934, 10-940, 10-947
 rockshaft

 install 16-48
 remove 16-46
 rollover protective structure 1-10
 roof 18-80
 roof controller 18-22
 roof front and rear turn lamps 18-35
 roof lighting module address 10-1241
 rotating beacon lamp 10-1243, 10-1245
 rotor and stator 5-33, 5-34
 running lamps 10-1307, 10-1310

S

safety 1-5
 safety messages 1-4
 safety signs 1-5
 safety symbol 1-4
 scale 12-36
 scr
 maintenance 2-368
 SCR
 DEF quality 2-386
 dosing rate test 2-382
 inlet exhaust gas temperature 10-115-10-117
 lifting capacity test 2-375, 2-376, 2-378
 NOx emission 2-379
 outlet exhaust gas temperature 10-118-10-120
 supply module 2-371, 2-375, 2-376, 2-378
 system error 10-164, 10-165
 temperature sensors 10-138
 scr catalyst 2-381
 SCR catalyst
 clean up 2-381
 SCR system 2-372, 2-373
 SCR system error 10-69-10-71
 SCR system malfunction 10-69
 SCR system malfunction 10-69
 seat group 18-62
 secondary fuel filter
 install 2-168
 remove 2-166
 secondary planetary carrier
 assemble 3-98
 secondary steering
 data not correct or out of calibration 10-449
 secondary steering solenoid 10-539, 10-542, 10-545
 selective catalytic reduction 2-196
 serial number definition 1-16
 serpentine belt
 remove 2-9, 12-39
 service 1-5, 2-262
 service and brake system operation 7-3
 service and parking brake system block diagram 7-3
 service brake
 purge 7-84
 test 3-148, 3-170
 service brake accumulator pressure switch
 voltage too low 10-172
 service brake operation 7-4
 service brake valve
 install 7-40
 remove 7-38
 service brakes 3-3, 7-18
 service codes faults 12-8
 service intervals 1-19

Index

FMI 01	10-722	SPN 2832	
FMI 03	10-726	FMI 31	10-757
FMI 04	10-730	SPN 2833	
SPN 2000		FMI 14	10-411
FMI 02	10-392, 10-734	FMI 31	10-414
SPN 2005		SPN 2858	
FMI 02	10-398	FMI 02	10-417, 10-760
SPN 2034		SPN 2873	
FMI 02	10-734	FMI 02	10-1246
SPN 2161		SPN 2875	
FMI 02	10-735	FMI 02	10-1250
SPN 2162		SPN 2905	
FMI 02	10-737	FMI 03	10-422
SPN 2163		FMI 05	10-425
FMI 02	10-738	FMI 06	10-428
SPN 2164		SPN 2906	
FMI 02	10-740	FMI 03	10-431
SPN 2165		FMI 05	10-434
FMI 02	10-741	FMI 06	10-437
SPN 2166		SPN 2910	
FMI 02	10-743	FMI 03	10-440
SPN 2208		FMI 06	10-446
FMI 02	10-1196	SPN 2924	
SPN 2209		FMI 14	10-449
FMI 02	10-1241	SPN 2970	
SPN 2210		FMI 02	10-761
FMI 02	10-1282	FMI 03	10-767
SPN 2354		FMI 04	10-771
FMI 05	10-1198	FMI 05	10-775
FMI 06	10-1201	SPN 2971	
SPN 2362		FMI 03	10-780
FMI 05	10-1227	FMI 04	10-784
FMI 06	10-1230	FMI 05	10-788
SPN 2368		SPN 3031	
FMI 05	10-1204, 10-1233, 10-1284	FMI 03	10-45
FMI 06	10-1207, 10-1235, 10-1287	FMI 04	10-46
SPN 2370		FMI 10	10-48
FMI 05	10-1209, 10-1237, 10-1290	FMI 14	10-49
FMI 06	10-1212, 10-1239, 10-1293	FMI 16	10-51
SPN 2376		SPN 3361	
FMI 05	10-1296	FMI 03	10-52
FMI 06	10-1299	FMI 04	10-54
SPN 2386		FMI 05	10-55
FMI 05	10-1243	FMI 06	10-57
FMI 06	10-1245	FMI 11	10-58
SPN 2392		FMI 14	10-60
FMI 05	10-1302	FMI 31	10-61
FMI 06	10-1305	SPN 3363	
SPN 2404		FMI 03	10-63
FMI 05	10-1307	FMI 04	10-64
FMI 06	10-1310	FMI 05	10-66
SPN 2602		FMI 31	10-67
FMI 14	10-404	SPN 3454	
SPN 2613		FMI 02	10-452
FMI 01	10-407	SPN 3507	
FMI 18	10-409	FMI 06	10-1253
SPN 2653		SPN 3508	
FMI 05	10-1214	FMI 05	10-1256
FMI 06	10-1216	FMI 06	10-1259
SPN 2655		SPN 3509	
FMI 05	10-1218	FMI 03	10-456
FMI 06	10-1220	FMI 04	10-458
SPN 2825		SPN 3510	
FMI 00	10-744	FMI 03	10-793
FMI 01	10-751	FMI 04	10-799

SPN 3511	FMI 04	10-103
FMI 03	SPN 4355	10-105
FMI 04	FMI 03	10-106
SPN 3513	FMI 04	10-108
FMI 03	SPN 4356	10-109
FMI 04	FMI 03	10-111
SPN 3646	FMI 04	10-112
FMI 02	FMI 05	10-114
FMI 03	SPN 4357	10-115
FMI 04	FMI 03	10-116
FMI 05	FMI 04	10-117
SPN 3652	SPN 4360	10-118
FMI 02	FMI 02	10-119
FMI 03	FMI 03	10-120
FMI 04	FMI 04	10-121
SPN 3652 FMI 05	SPN 4363	10-122
SPN 3653	FMI 02	10-123
FMI 02	FMI 03	10-125
FMI 03	FMI 04	10-126
FMI 04	SPN 4374	10-128
FMI 05	FMI 08	10-129
SPN 3825	FMI 14	10-131
FMI 12	FMI 31	10-132
SPN 3976	SPN 4375	10-134
FMI 06	FMI 03	10-135
SPN 4011	FMI 04	10-137
FMI 05	FMI 05	10-1270
FMI 06	FMI 31	10-1273
SPN 4090	SPN 4376	10-1276
FMI 16	FMI 03	10-1279
FMI 18	FMI 04	10-207
SPN 4332	FMI 05	10-211
FMI 00	FMI 31	10-138
FMI 11	SPN 46	10-896
FMI 14	FMI 00	10-903
FMI 16	FMI 01	10-909
FMI 18	FMI 03	10-915
FMI 31	FMI 04	10-922
SPN 4334	SPN 473	10-929
FMI 03	FMI 03	10-935
FMI 04	FMI 04	10-941
SPN 4340	SPN 4792	10-948
FMI 03	FMI 14	10-948
FMI 04	SPN 520193	10-955
FMI 05	FMI 02	10-961
FMI 31	FMI 03	10-967
SPN 4342	FMI 04	10-138
FMI 03	FMI 05	10-896
FMI 04	SPN 520194	10-903
FMI 05	FMI 02	10-909
FMI 31	FMI 03	10-915
SPN 4344	FMI 04	10-922
FMI 02	FMI 05	10-929
FMI 03	SPN 520196	10-935
FMI 04	FMI 02	10-941
FMI 08	FMI 31	10-948
FMI 12	SPN 520197	10-948
FMI 31	FMI 02	10-955
SPN 4346	FMI 03	10-961
FMI 03	FMI 04	10-967
FMI 04	FMI 05	10-138
FMI 05	SPN 521000	10-140
FMI 31	FMI 02	10-141
SPN 4354	FMI 08	
FMI 03	SPN 521001	
	FMI 03	

FMI 04	10-143	FMI 06	10-545
FMI 31	10-144	SPN 521893	
SPN 521002		FMI 03	10-989
FMI 03	10-146	FMI 04	10-992
FMI 04	10-147	FMI 05	10-995
FMI 05	10-149	SPN 521894	
FMI 31	10-150	FMI 03	10-999
SPN 521003		FMI 04	10-1001
FMI 03	10-152	FMI 05	10-1004
FMI 04	10-153	SPN 564	
SPN 521004		FMI 03	10-215
FMI 02	10-155	FMI 05	10-216
FMI 11	10-156	FMI 06	10-218
FMI 12	10-157	SPN 590	
FMI 14	10-158	FMI 09	10-220
SPN 521005		FMI 12	10-225
FMI 02	10-159	SPN 598	
FMI 11	10-160	FMI 02	10-230
FMI 12	10-161	FMI 07	10-234
FMI 14	10-162	FMI 14	10-238
SPN 521006		SPN 601	
FMI 12	10-163	FMI 02	10-554
SPN 521007		FMI 03	10-559
FMI 10	10-164	FMI 04	10-563
FMI 14	10-164	FMI 05	10-567
FMI 31	10-164	SPN 611	
SPN 521008		FMI 00	10-1012
FMI 00	10-165	steering wheel position sensor	
FMI 01	10-165	above normal	10-1012
SPN 521471		SPN 612	
FMI 00	10-475	FMI 00	10-1015
FMI 01	10-479	SPN 613	
FMI 02	10-483	FMI 14	10-1018
FMI 08	10-486	SPN 614	
FMI 12	10-488	FMI 00	10-1022
FMI 13	10-491	SPN 615	
SPN 521472		FMI 14	10-1025
FMI 00	10-492	SPN 617	
FMI 01	10-496	FMI 03	10-242
FMI 02	10-500	FMI 05	10-244
FMI 08	10-502	FMI 06	10-247
FMI 12	10-505	SPN 618	
FMI 13	10-507	FMI 03	10-250
SPN 521473		FMI 05	10-253
FMI 00	10-508	FMI 06	10-256
FMI 01	10-512	SPN 625	
FMI 02	10-516	FMI 02	10-259
FMI 08	10-518	FMI 09	10-262
FMI 12	10-521	FMI 12	10-265
FMI 13	10-523	SPN 627	
SPN 521474		FMI 00	10-1029
FMI 02	10-974	FMI 04	10-1032
FMI 03	10-978	SPN 628	
FMI 04	10-982	FMI 12	10-1063, 10-1083, 10-1103, 10-1123,
FMI 05	10-985	10-1143, 10-1163, 10-1183	
SPN 521475		SPN 639	
FMI 02	10-524	FMI 09	10-269
SPN 521476		FMI 19	10-572, 10-1067, 10-1087, 10-1107,
FMI 00	10-528	10-1127, 10-1147, 10-1167, 10-1184, 10-1195	
FMI 01	10-531	SPN 677	
FMI 08	10-534	FMI 03	10-273
FMI 13	10-537	FMI 05	10-276
SPN 521760		FMI 06	10-279
FMI 03	10-539	SPN 678	
FMI 05	10-542	FMI 03	10-282, 10-287

SPN 684		starting the engine	2-280
FMI 00	10-291	steering - implement pump	
FMI 01	10-295	install	5-55, 7-51, 9-51
FMI 08	10-299	steering - priority valve	5-6, 7-6, 9-22, 16-11
SPN 689		steering - priority valve - neutral	5-31
FMI 02	10-575	steering and implement pump	
FMI 03	10-579	remove	5-51, 7-47, 9-47
FMI 04	10-582	steering and priority valve	
FMI 05	10-585	install	5-62, 7-58, 9-58
SPN 701		remove	5-58, 7-55, 9-54
FMI 05 10-1068, 10-1088, 10-1108, 10-1128,		steering angle sensor	5-12
10-1148, 10-1168, 10-1189		steering assist module	
FMI 06 10-1069, 10-1089, 10-1109, 10-1129,		schematic 10-1011, 10-1014, 10-1017, 10-1021,	
10-1149, 10-1169, 10-1191		10-1024, 10-1028, 10-1031, 10-1034,	
SPN 702		10-1037, 10-1040, 10-1043, 10-1046,	
FMI 05 10-1071, 10-1091, 10-1111, 10-1131,		10-1049,	10-1052
10-1151, 10-1171, 10-1192		steering console	
FMI 06 10-1072, 10-1092, 10-1112, 10-1132,		install	11-27
10-1152, 10-1172, 10-1193		remove	11-25
SPN 734		steering cylinder	
FMI 03	10-304	install	5-73
FMI 05	10-306	steering cylinder test ports	5-11
FMI 06	10-309	steering cylinders	
SPN 735		remove	5-69
FMI 03	10-312	steering performance	
FMI 05	10-315	check	5-102
FMI 06	10-318	steering sensor box	18-70
SPN 736		steering system	
FMI 03	10-321	bleed	5-102
FMI 05	10-324	steering system layout	5-3
FMI 06	10-327	steering unit	
SPN 737		install	5-67
FMI 03	10-330	remove	5-65
FMI 05	10-333	steering wheel position sensor	
FMI 06	10-336	1	10-486, 10-488
SPN 739		2	10-502, 10-505
FMI 03	10-348	3	10-518, 10-521
FMI 05	10-351	abnormal sensor frequency 10-486, 10-502,	
FMI 06	10-354	10-518	
SPN 84		malfunction	10-488, 10-505, 10-521
FMI 12	10-1009	steering wheel position sensor above normal range	
SPN 882		2	10-492
FMI 05	10-1264	steering wheel position sensor above normal operational	
FMI 06	10-1267	range	
SPN 898		1	10-475
FMI 00	10-588	3	10-508
FMI 01	10-592	steering wheel position sensor below normal operational	
SPN 91		range	
FMI 08	10-550	1	10-479
FMI 13	10-552	3	10-512
SPN 96		steering wheel position sensor below normal range	
FMI 03	10-166	2	10-496
FMI 04	10-169	steering wheel position sensor erratic, intermittent, or	
spool valve	5-32-5-34	incorrect.	
standard conditioner group	18-43	1	10-483
standard drawbar	17-7	2	10-500
standard steering - priority valve - left turn	5-25	3	10-516
standard steering - priority valve - right turn	5-23	steering wheel position sensor out of calibration	
standard steering system - left-hand turn	5-15	1	10-491
standard steering system - right-hand turn	5-17	2	10-507
start the engine	1-8	3	10-523
starter		stop lamp	10-1296, 10-1299
install	2-129	straight thread fittings	1-24
remove	2-127	suction screen	
starter ring gear	2-317	servicing	9-166

suction screen (charge pump)		tightening torques	2-244
install	5-107	timing gear casing	2-318, 2-319
remove	5-105	timing gear housing	2-318, 2-319
suction screen (implement pump)		timing gears	2-215
install	5-113	toolbox	
remove	5-110	install	17-32
supply module		remove	17-31
DEF connector	2-371	tooling	
inlet filter	2-371	single wheel bolt	14-19
main filter	2-371	spacer torque wrench extension	14-17
switches		wheel bolt 36 mm wrench	14-21
install	11-23	wheel guide stud	14-22
remove	11-23	top and bottom starter	18-63
system		top link	
charge	12-35	assemble	4-16
system charge	12-36	install	16-42
system evacuation	12-29	remove	16-41
system failure	12-12	top link - scraper option	
system operation	12-3	assemble	4-17
system sensors	12-5	topcon x-30	18-20
T		torque specifications	1-24
taperlock studs	1-24, 1-27	tow cable	
technical data		install	17-39
camshaft	2-234	remove	17-38
connecting rod	2-236	track to ground slip	10-948
cooling system	2-211	tractor management center	5-12, 9-26, 16-18
crankshaft	2-234	trailer auxiliary a switch	18-73
cylinder block	2-230	trailer brake coupler	
cylinder head	2-232	install	7-78
cylinder liners	2-231	remove	7-76
dimensions	2-210	trailer brake schematic	7-12
fuel system	2-210	trailer brake system (optional)	7-5
lubrication system	2-210	trailer brake valve	
piston	2-236	install	7-75
piston pin	2-236	remove	7-73
piston ring	2-236	trailer lights	18-72
push rods	2-233	trans solenoids	18-74
rockers	2-232	transmission	
tappets	2-233	install	6-14
timing gears	2-235	charge filter	6-8
turbocharger	2-238	electrical control system	6-6
valves	2-232	hydraulic system	6-4
technician, a word to	1-3	introduction	6-3
temperature control switch	12-5	remove	6-9
temperature/pressure chart	12-33	transmission clutch modulating valve	
temperatures	1-18	assemble	6-25
terminal diagram	2-402	disassemble	6-24
test		install	6-25
clutch lubricating oil pressure	15-36	remove	6-23
test equipment	9-126, 16-59	transmission clutch solenoid 1	
test ports	9-25	current above normal	10-309
test the implement valve section flow		current below normal	10-306
high flow implement valve	9-137	voltage above normal	10-304
standard implement valve	9-136	transmission clutch solenoid 2	
test the implement valve stall pressure		current above normal	10-315
all sections	9-135	current is above normal	10-318
single section	9-135	voltage above normal	10-312
testing	2-332	transmission clutch solenoid 3	
thermostat		current above normal	10-327
remove	2-332	current below normal	10-324
replace	2-333	voltage above normal	10-321
throttle lever position sensor	18-17	transmission clutch solenoid 4	
throttle valve	2-222	current above normal	10-336
		current below normal	10-333
		voltage above normal	10-330

transmission clutch solenoid 7
 circuit voltage above normal 10-422

transmission clutch solenoid 8
 circuit voltage above normal 10-431

transmission control lever
 location ... 10-750, 10-756, 10-824, 10-830, 10-836,
 10-843

transmission cooler
 install 2-75
 remove 2-66

transmission filter bypass switch 18-69

transmission hydraulic oil
 temperature is above normal range 10-192

transmission hydraulic oil sensor
 signal frequency not within range 10-198

transmission hydraulic oil temperature sensor
 voltage above normal range 10-189
 voltage too low 10-195

transmission input shaft speed sensor
 signal not correct 10-183

transmission lubrication relief valve
 installing 6-26
 remove 6-26

transmission modulating valves 6-8

transmission module
 communication 10-225

transmission oil cooler bypass valve
 install 6-31
 remove 6-30

transmission oil filter
 bypass valve 3-12

transmission oil filter bypass
 signal is not within normal range 10-176

transmission oil temperature sensor
 install 6-33
 removing 6-32

transmission output shaft speed sensor
 pulse width not within normal range 10-204
 signal frequency not within normal range .. 10-204

transmission sensors 18-75

transmission solenoid 7
 current above normal 10-428
 current below normal 10-425

transmission solenoid 8
 current above normal 10-437
 current is below normal 10-434

transmission sump 3-11

transmission system 6-3

transmission troubleshooting 6-52

tri-section front pump
 assemble 3-47
 disassemble 3-35

tri-section pump
 install 3-60, 6-22
 remove 3-33, 6-20
 troubleshooting 7-82

tri-section pump specifications 3-176

tri-section rear pump
 assemble 3-53
 disassemble 3-42

troubleshoot 12-8, 12-9

troubleshoot the air dryer 8-27

troubleshooting procedure 9-125, 16-58

turbo cut off valve
 replace 8-33

turbocharger
 actuator 2-341
 high-pressure 2-345
 low-pressure 2-342

turbocharging 2-222

turn signal lamp ... 10-1204, 10-1207, 10-1209, 10-1212

U

unassigned auxiliary valve module 10-1195

upper articulation front joint
 connecting 4-20
 disconnect 4-9

upper articulation top link
 install 4-18

upshift switch
 location 10-850, 10-856, 10-862, 10-869

upstroke 5-36

usb charging port 18-55

V

valve 2-294

valve guides 2-292

valve mechanism
 HLA 2-297
 hydraulic lash adjusters 2-297

valve seat ring 2-292

valve stack top cap 9-33

vibration damper
 viscose 2-310

visual inspection 9-126, 12-12, 16-59

W

warm the hydraulic oil 9-127, 16-60

warranty 1-5

wheel
 center wheel installation 14-11
 center wheel removal 14-4
 inside wheel installation 14-8
 inside wheel removal 14-5
 outside wheel installation 14-13
 outside wheel removal 14-3

wheel slippage
 calculate 17-20

wheel weights
 install 17-28
 remove 17-26

wiring 2-229

woofer 18-59

word to the technician 1-3

