



PARTS LIST NO. M18713 00604

DCA - 40SSKU4F

PARTS LIST

Denyo Manufacturing Corp.

SERIAL No. 9250237~

HOW TO USE THE PARTS LIST

1. This parts list covers the parts for Engine-Driven AC Generator Model DCA-40SSKU4F.
2. When placing orders, specify the following details;
 - 1) Model Number and Serial Number.
 - 2) Parts Number and Parts Name.
 - 3) Quantity required.
3. The parts listed with a serial number are new parts.
Please place an order with us after confirmation of serial number for machine at your side.
4. The sequence of this parts list is by machine structure. Each group of parts has an illustration or the first page of the parts list. Parts can be identified on the parts list, using the key number on the illustration. These key number, on the illustration, are also shown on the left-hand column in the parts list.
5. The parts number are shown as 10 digits and alphabet. The parts number of the parts makers are shown in the remark column.
6. The parts marked with an asterisk and the parts not listed are not available as a single part, and orders must be placed for them as an assembly.
7. This parts list uses the following abbreviations and symbols:

All	:Some parts differ from unit to unit	p.	:Page
Ass'y	:Assembly	Re.	:Rear
Fr.	:Front	R.H.	:Right
L.H.	:Left	STD	:Standard
No.	:Number	→	:Indication of the page where the modified or additional parts are listed.
O.P.	:Optional Parts		


Each symbol [A] [B] [C] listed in a part of Q'ty shows the appropriate parts number for the unit you purchased. The meaning of the symbol [A] [B] [C] is listed on the first top place of each assembly group.

Please check the specification of the unit such as frequency, voltage, model No. etc. before placing orders.


8. Left (L.H.) and Right (R.H.) used in this parts list show the direction when you look at the engine from the generator side.
9. For the engine parts not listed in this parts list, refer to "KUBOTA Corporation. V2403-CR-T Diesel Engine Parts Catalogue."

I N D E X

Name	Page
Engine-Driven AC Generator Set	1 - 1
Generator Ass'y	2 - 1
Control Box Ass'y	3 - 1
Engine & Radiator Ass'y	4 - 1
Output Terminal Ass'y	5 - 1
Battery Ass'y	6 - 1
Muffler Ass'y	7 - 1
Fuel Tank Ass'y	8 - 1
Bonnet Ass'y (Part 1)	9 - 1
Bonnet Ass'y (Part 2)	10 - 1
Name Plate Ass'y	11 - 1

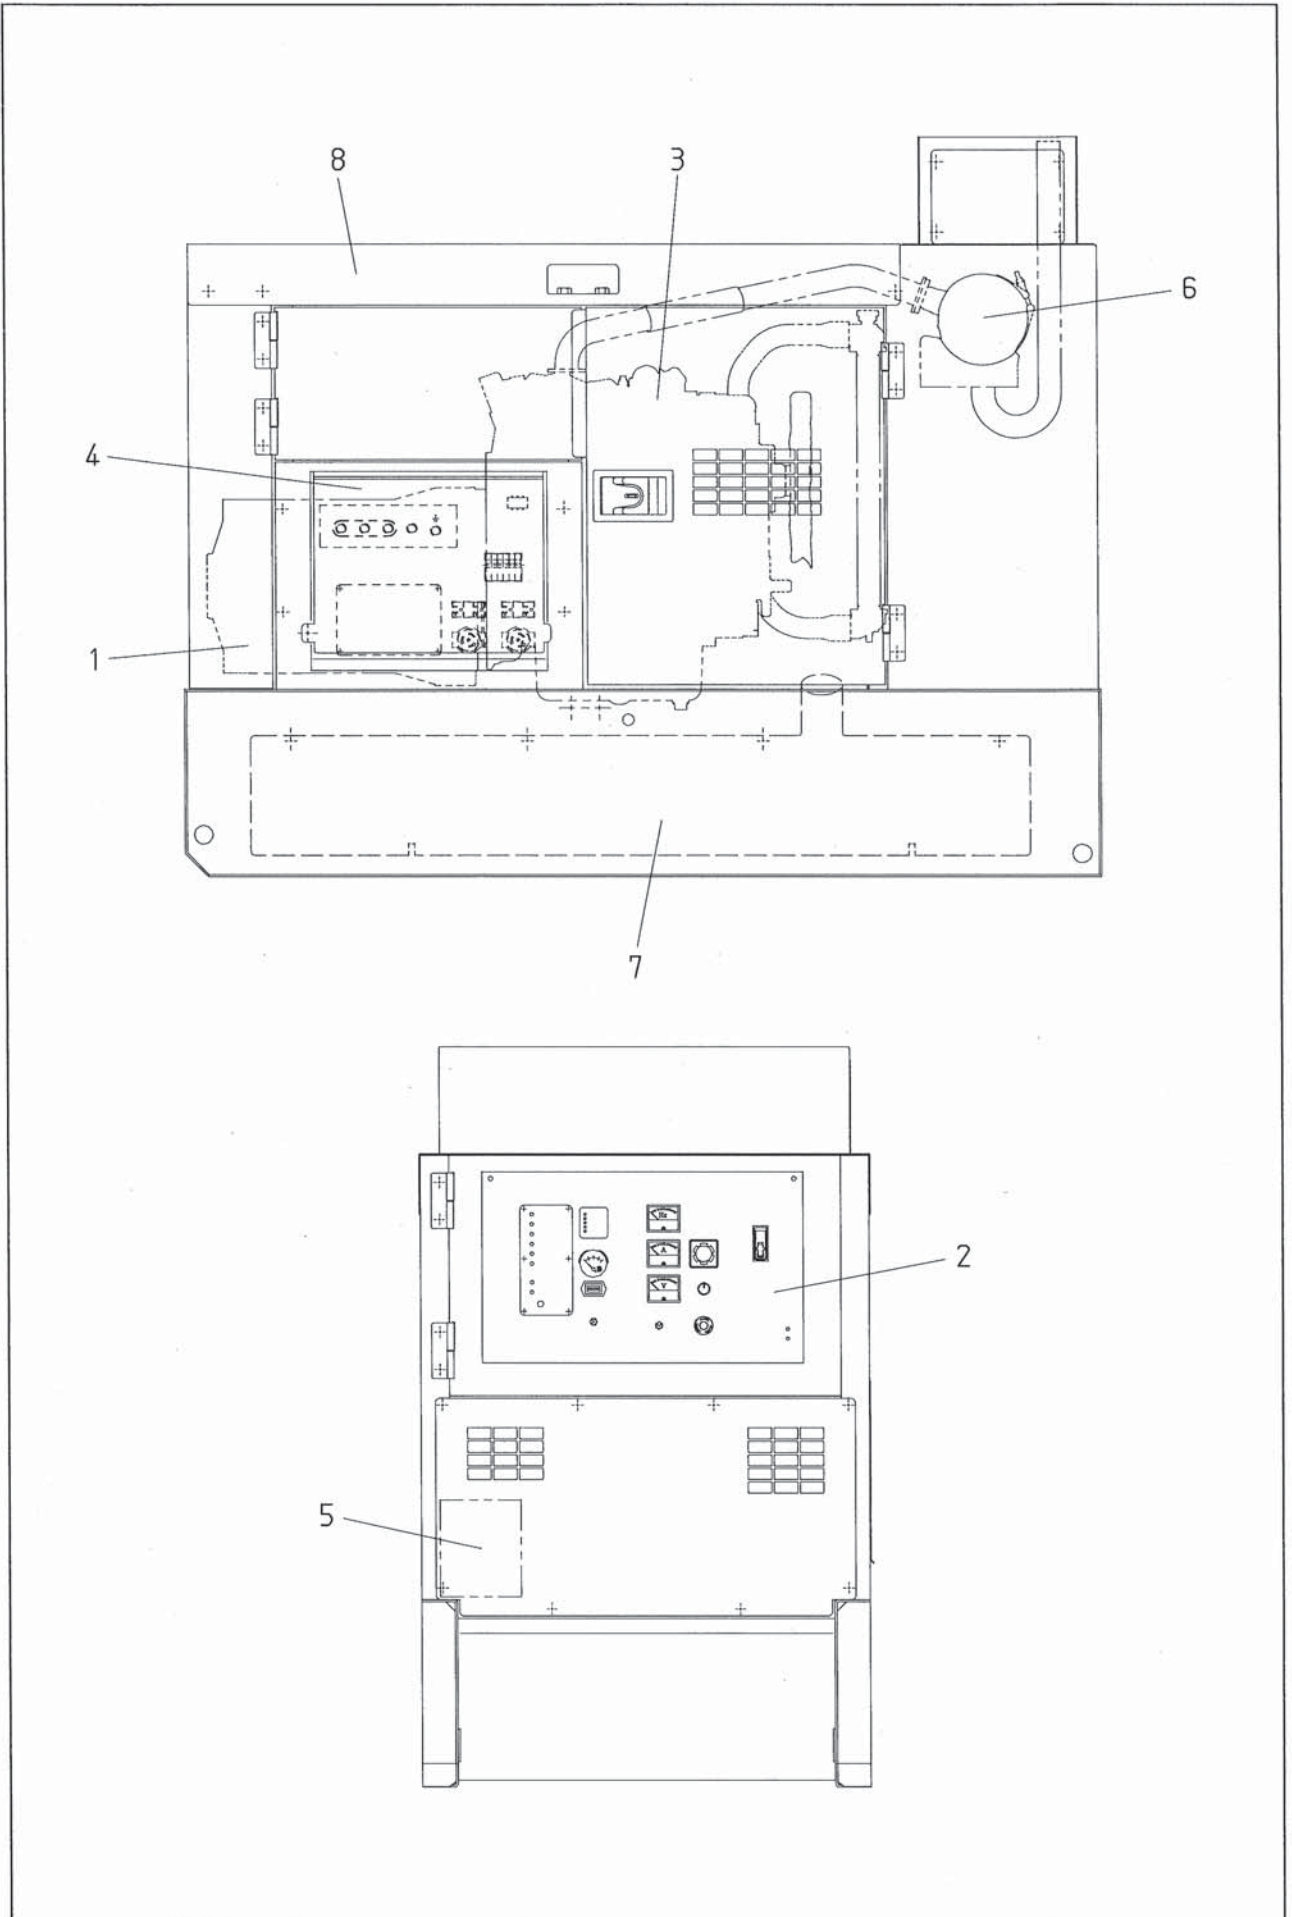


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1		Generator Ass'y	Refer to p.2-1						
2		Control Box Ass'y	Refer to p.3-1,3-2						
3		Engine & Radiator Ass'y	Refer to p.4-1						
4		Output Terminal Ass'y	Refer to p.5-1						
5		Battery Ass'y	Refer to p.6-1						
6		Muffler Ass'y	Refer to p.7-1						
7		Fuel Tank Ass'y	Refer to p.8-1						
8		Bonnet Ass'y(Part 1)	Refer to p.9-1						
		Bonnet Ass'y(Part 2)	Refer to p.10-1						
		Name Plate Ass'y	Refer to p.11-1						

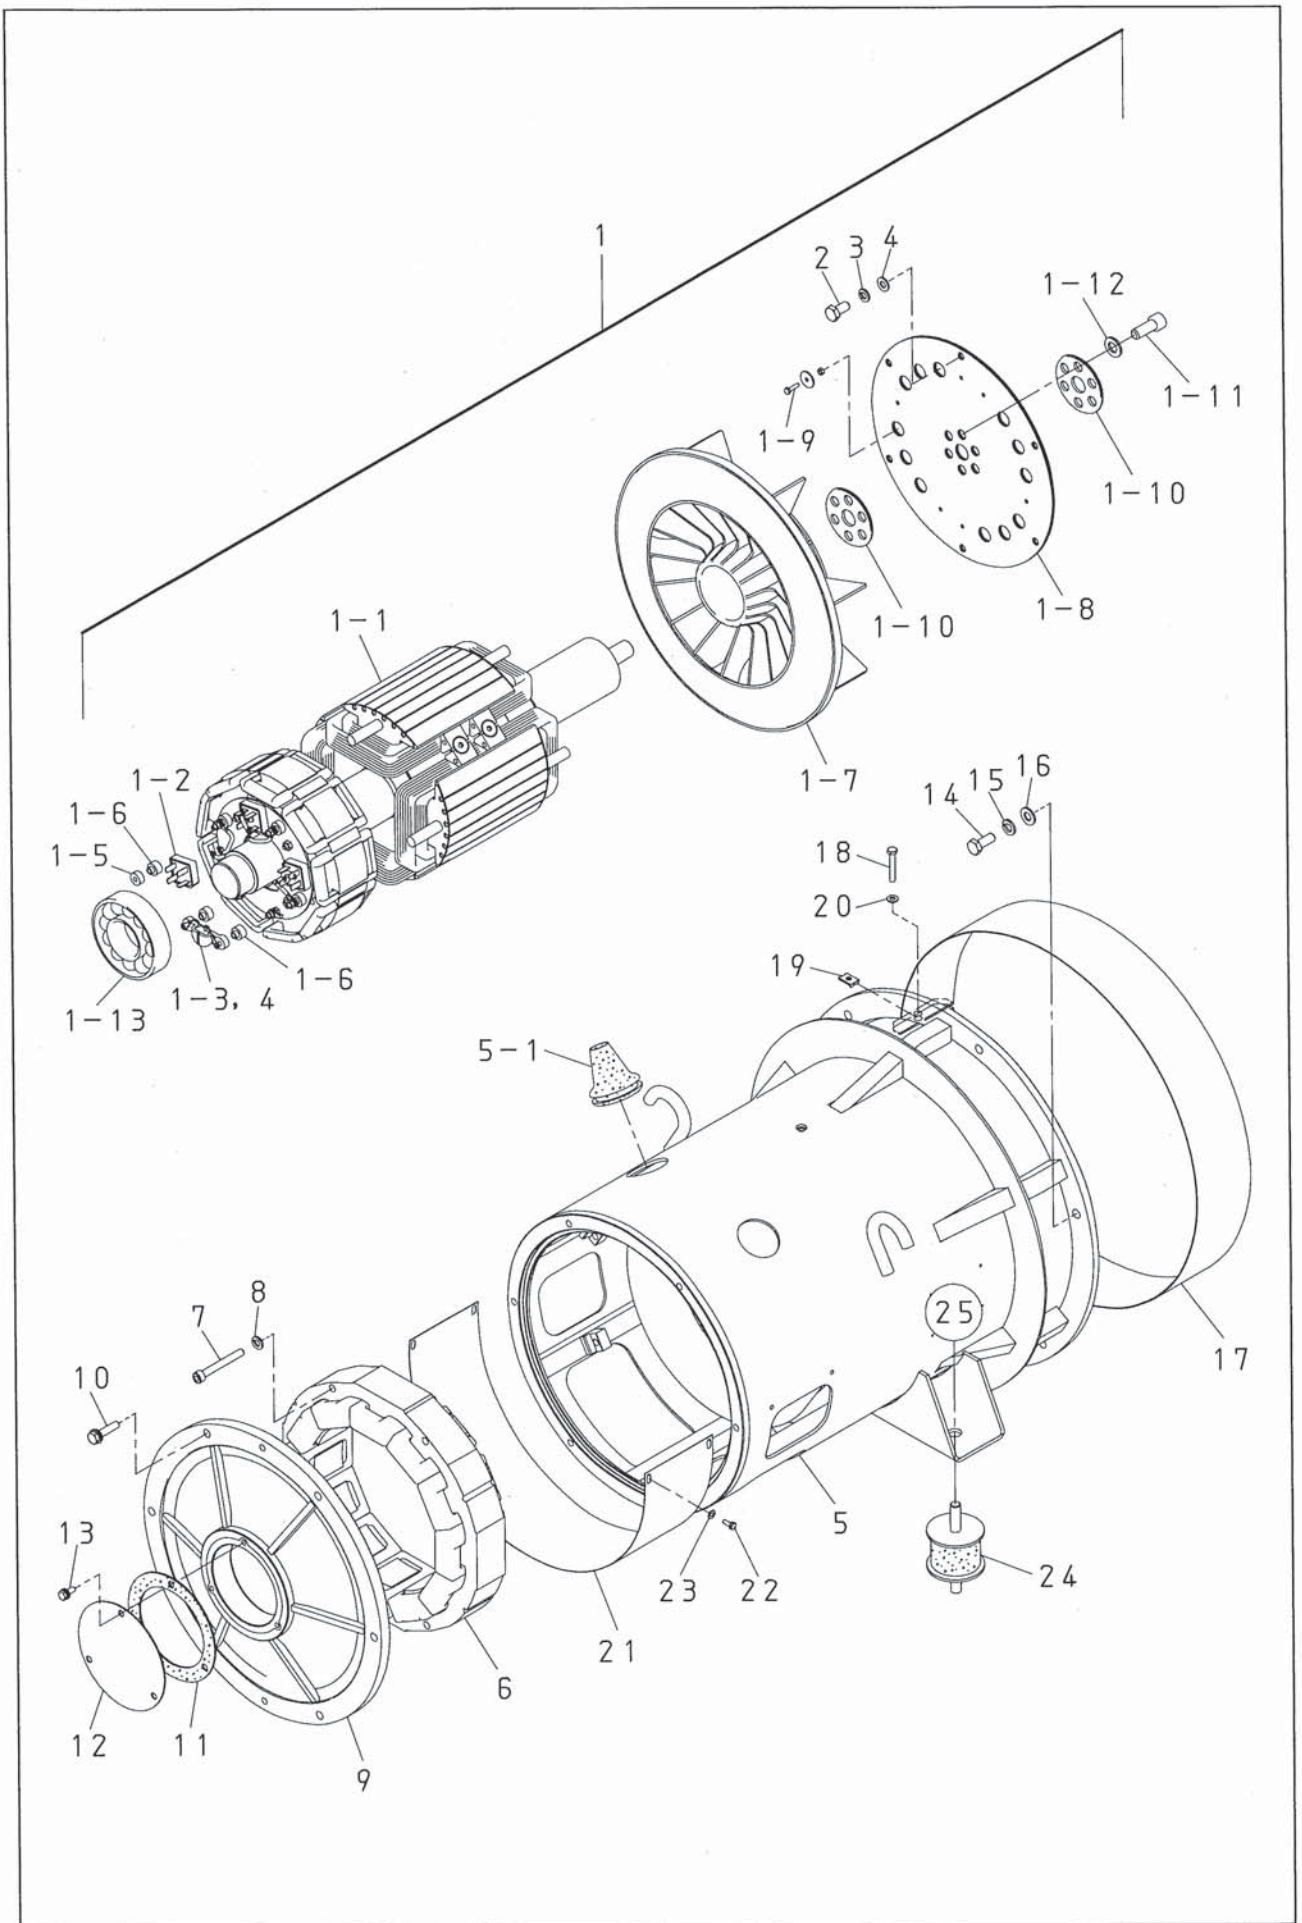


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	B 31101 00802	Rotor Ass'y		1					
*1- 1		Field Ass'y		(1)					
1- 2	Y 06018 20083	Rectifier	S25VB60	(3)				Re	
1- 3	Y 06018 22664	ZNR		(1)					
1- 4	B 31201 00804	Holder, ZNR		(1)					
1- 5	B 31201 00604	Insulator Washer		(3)					
1- 6	B 31201 00704	Insulator Washer		(5)					
1- 7	B 31111 00603	Fan		(1)					
1- 8	B 31631 00204	Coupling Disk	Please purchase a set of 1-9 at the same time.	(3)					
1- 9	Y 00191 04016	Hex. Head Bolt							
	B 41637 00004	Balancing Weight							
	Y 02041 04000	U Nut							
1-10	B 31632 00104	Coupling Washer		(2)					
1-11	Y 03426 12030	Hex. Socket Head Cap Screw		(6)					
1-12	Y 00465 12000	Plain Washer		(6)					
1-13	Y 00719 06309	Bearing		(1)					
2	Y 00103 08020	Hex. Head Bolt		6					
3	Y 00400 08000	Spring Washer		6					
4	Y 00412 08000	Plain Washer		6					
5	B 31301 01003	Stator Ass'y		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
5- 1	W 08450 41904	Grommet		2					
6	B 31370 00803	Field Ass'y, exciter		1					
7	Y 00160 08060	Hex. Socket Head Cap Screw		4					
8	Y 00425 08000	Spring Washer		4					
9	B 31530 00513	End Bracket		1					
10	Y 00171 08035	Hex. Head Bolt		6					
11	B 31534 00504	Packing		1					
12	B 31534 00404	Cover, bearing		1					
13	Y 00171 06016	Hex. Head Bolt		3					
14	Y 00107 10025	Hex. Head Bolt		6					
15	Y 00400 10000	Spring Washer		6					
16	Y 00412 10000	Plain Washer		6					
17	B 51313 00004	Cover, end bracket		1					
18	Y 03404 06040	Hex. Head Bolt		1					
19	Y 06008 15000	Nut	USN-6001	1					
20	Y 00412 06000	Plain Washer		1					
21	B 31313 00804	Cover, end bracket		1					
22	Y 00292 05012	Machine Screw		4					
23	Y 00412 05000	Plain Washer		4					
24	Y 06050 00461	Rubber Suspension	7555A	2					
25	Y 00300 12000	Hex. Nut		2					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	Y 00400 12000	Spring Washer		2					
	Y 00412 12000	Plain Washer		2					

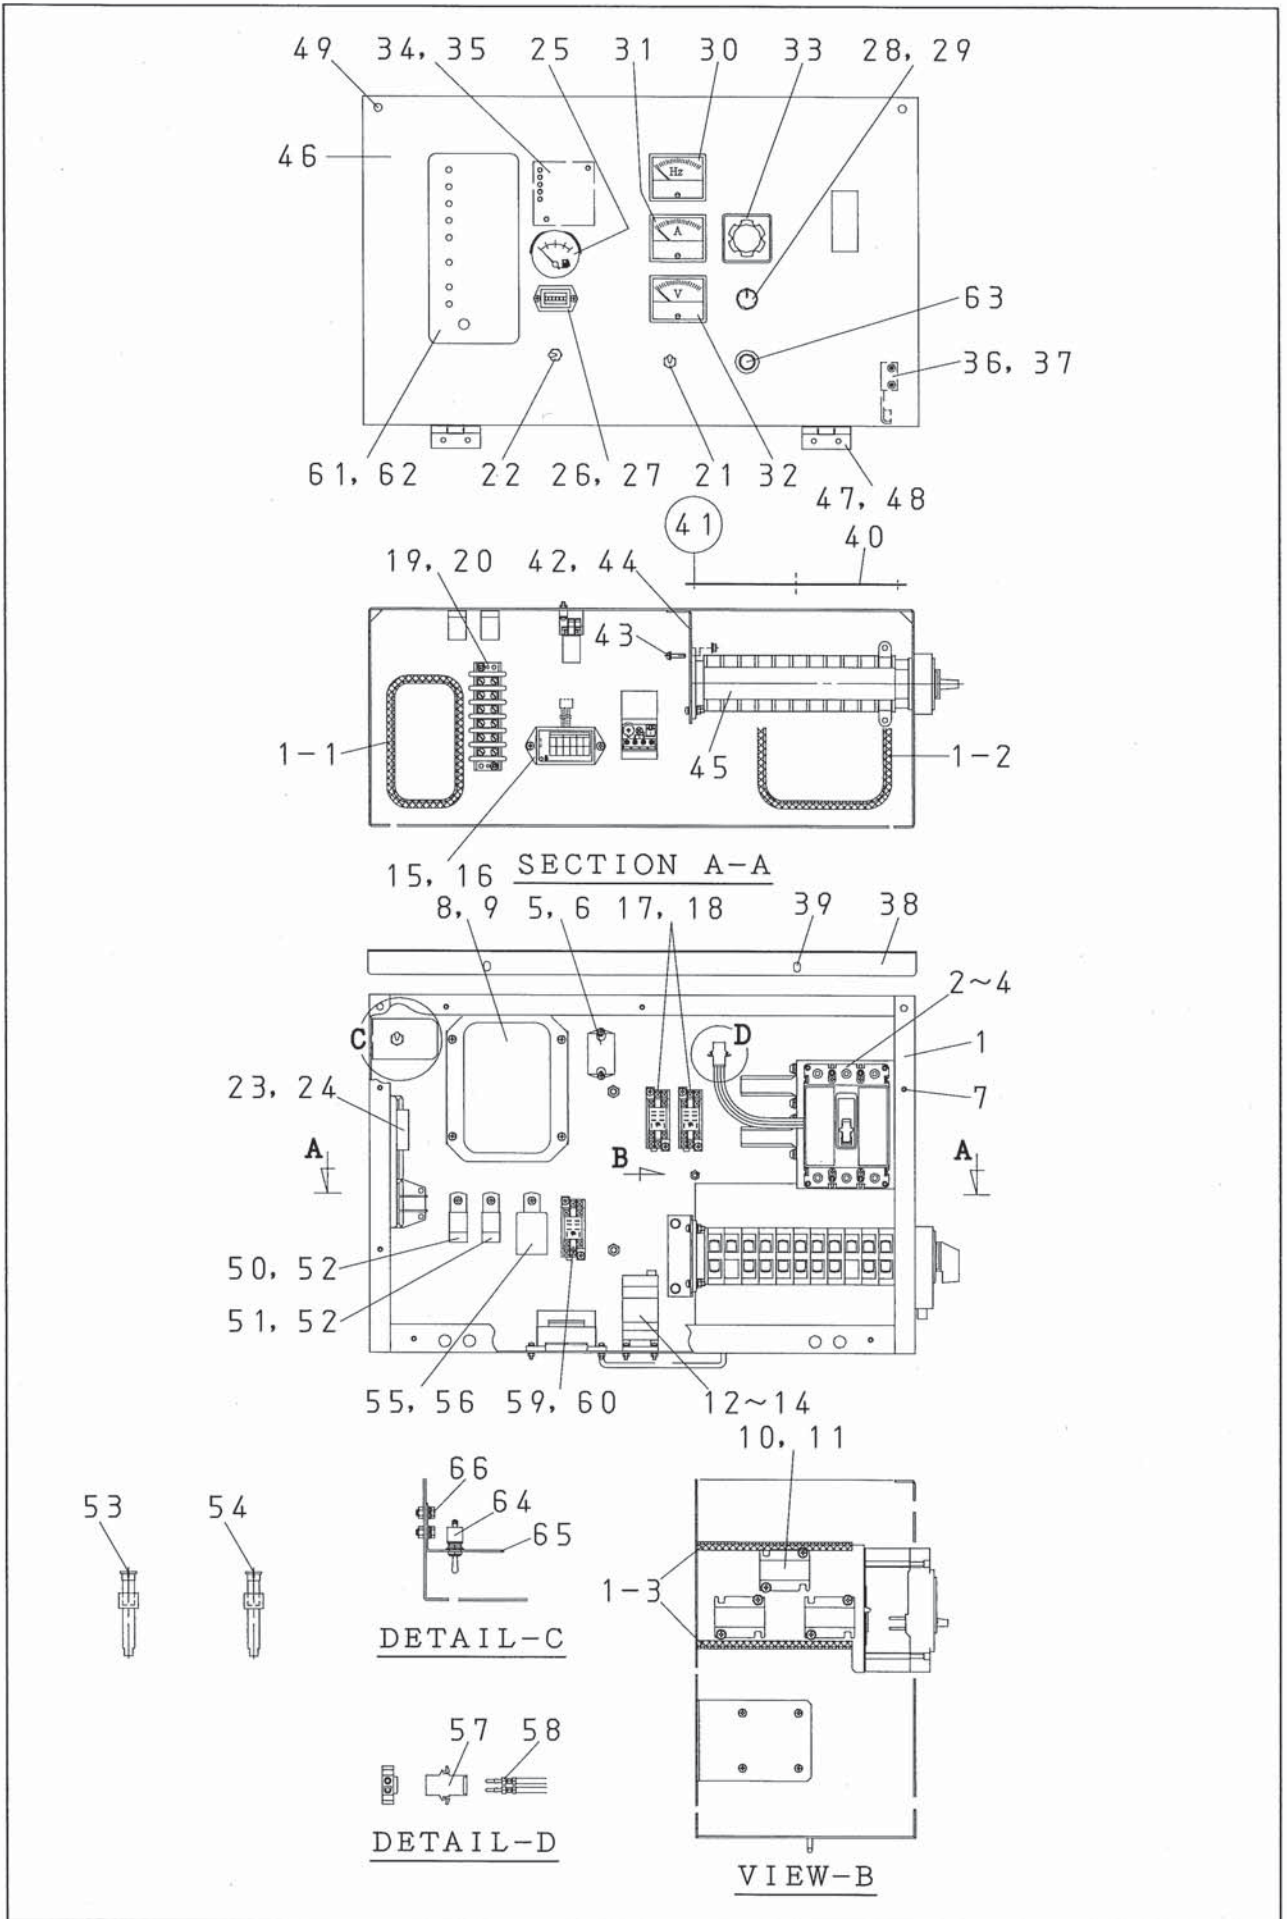

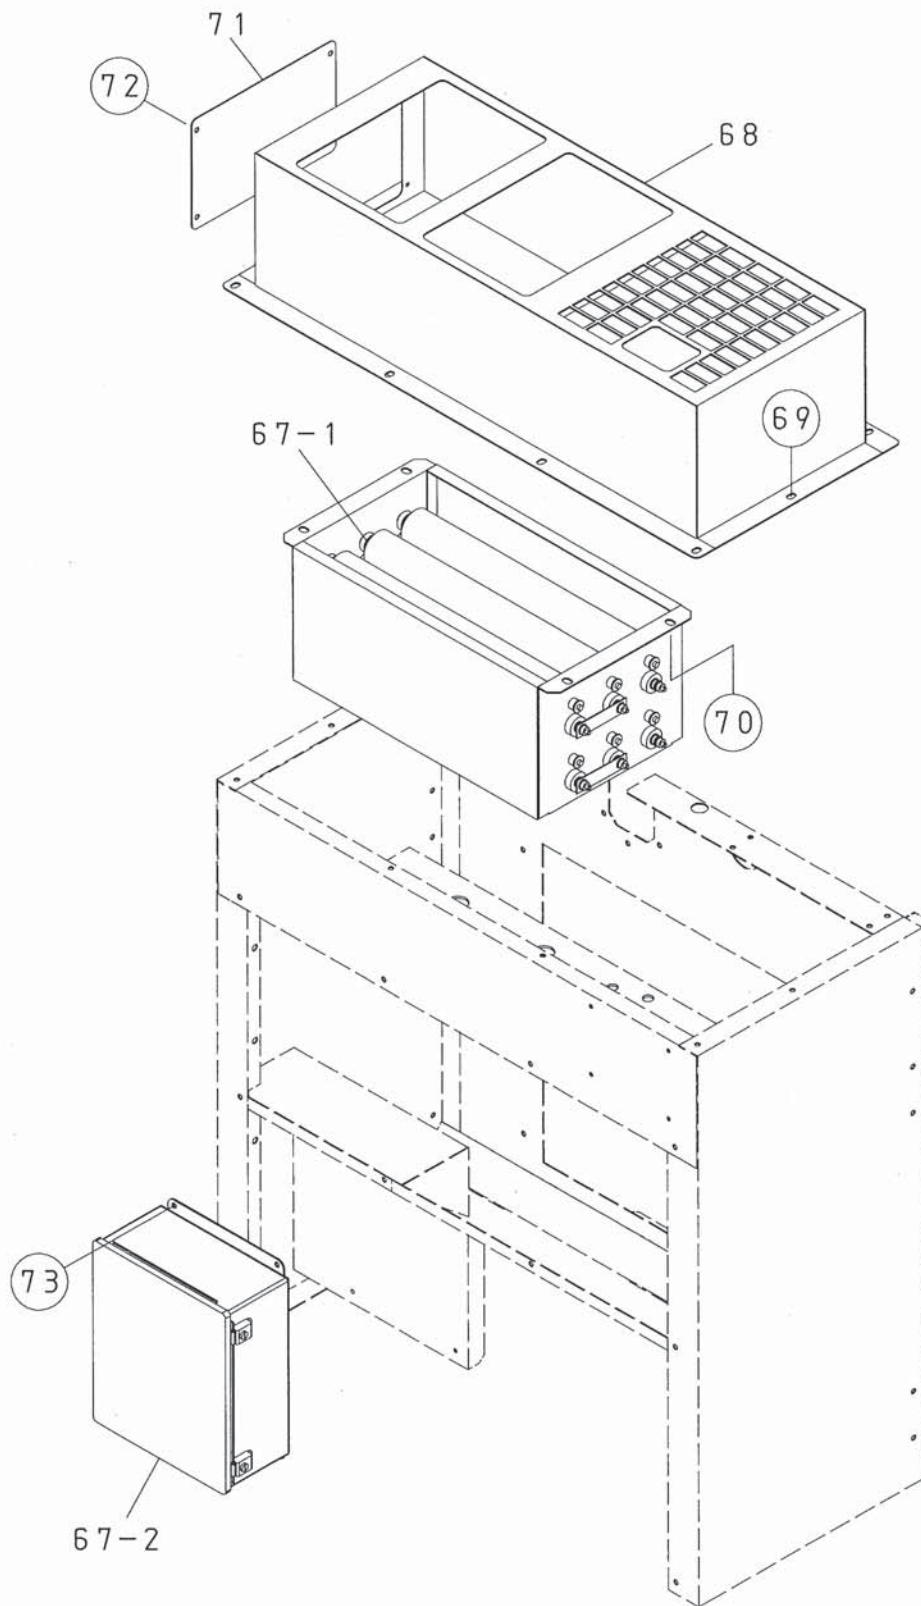


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	M 12477 02204	Wire Harness, generator		1					
	M 13582 01002	Wire Harness, engine		1					
	M 13582 01403	Wire Harness, power balance		1					
	M 13582 01503	Wire Harness, power balance		1					
1	M 12140 00902	Control Box		1					
1- 1	Y 03300 00400	Edging		1					
1- 2	Y 03300 00555	Edging		1					
1- 3	Y 03300 00190	Edging		2					
2	Y 06018 70431	Circuit Breaker	FG3110WS02 3P 110A T. C. 12VDC	1				CB1	
3	Y 06018 70490	End Cap Kit		2					
4	Y 00210 04040	Machine Screw		4					
5	Y 06018 23863	Relay Unit	MSA9013A	1				RY1	
6	Y 00271 04015	Machine Screw		2					
7	Y 00169 06015	Hex. Head Bolt		10					
8	Y 06018 20608	Automatic Voltage Regulator	NTA-4A-2DD	1				AVR	
	Y 06018 06683	Fuse	FGMB 250V 8A	(1)					
9	Y 00271 05015	Machine Screw		4					
10	Y 06018 09693	Current Transformer	2SFT-151 150:5A	3				CT1~3	
11	Y 00271 06015	Machine Screw		6					
12	Y 06018 20847	Over Current Relay	TA25DU4.0	1				OC	
13	Y 06018 20848	Over Current Relay Base	DB25/25A	1				OC	

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
14	Y 00271 04020	Machine Screw		2					
	Y 02070 04000	Self-Locking Nut		2					
15	M 12612 00004	Fuse Box		1					
	Y 06018 06647	Fuse	25A	(2)			F1		
	Y 06018 06642	Fuse	5A	(7)			F2~6		
	M 95210 00904	Decal:Fuse Box		(1)					
16	Y 00271 05015	Machine Screw		2					
17	Y 06018 27656	Relay	LY-2D DC12V	2			RY3, 4		
	Y 06018 23109	Base	PTF08A-E	2					
	Y 06018 24400	Clip	PYC-A1	4					
18	Y 00271 04020	Machine Screw		4					
19	Y 06018 16411	Terminal Block	603-GP-06	1			TB2		
20	Y 00271 04020	Machine Screw		2					
21	Y 06018 31340	Engine Speed Switch	2GM54-63	1					
22	Y 06018 31395	Auto Start/Stop Switch	S-302T	1					
23	Y 06022 02668	ECU	KUBOTA 1H729-60203	1					
24	Y 00272 08025	Machine Screw		4					
25	Y 06021 25090	Fuel Gauge	100176	1					
26	Y 06018 00682	Hour Meter	#82014	1					
27	Y 00271 03015	Machine Screw		2					
	Y 02070 03000	Self-Locking Nut		2					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
28	Y 06018 40073	Rheostat (Voltage Regulator)	RA20A2SE102BJ 2W 1k Ω	1				VR	
29	Y 06018 40121	Knob	25N	1					
30	Y 06018 07631	Frequency Meter	208388-H72-N-B-BL 45~65Hz 240V	1				F	
	Y 02070 03000	Self-Locking Nut		2					
31	Y 06018 17033	AC Ammeter	208338-A42-N-B-BL 0~75A, 0~150A/5A	1				A	
	Y 02070 03000	Self-Locking Nut		2					
32	Y 06018 06947	AC Voltmeter	208328-VSJ-N-B-BL 0~600V	1				V	
	Y 02070 03000	Self-Locking Nut		2					
33	Y 06018 01040	Change-Over Switch, ammeter	SL-2AS	1				AS	
34	Y 06022 03000	Controller		1					
35	Y 00210 04040	Machine Screw		2					
	Y 02070 04000	Self-Locking Nut		2					
36	M 12241 00104	Stopper		1					
37	Y 00271 05010	Machine Screw		2					
38	M 12135 01004	Control Box Cover		1					
39	Y 00169 06015	Hex. Head Bolt		4					
40	M 12134 00014	Control Box Cover		1					
41	Y 00169 06015	Hex. Head Bolt		4					
42	M 12146 01104	Switch Bracket		1					
43	Y 00271 05020	Machine Screw		4					
	Y 02070 05000	Self-Locking Nut		4					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
44	Y 00169 06015	Hex. Head Bolt		2					
45	M 12701 00604	Selector Switch	S440-SE3704	1				SW	
46	M 12240 00403	Control Panel		1					
47	M 91101 00404	Hinge		2					
48	Y 00271 05010	Machine Screw		4					
49	M 92201 00004	Set Screw		2					
	Y 00802 00007	E-Snap Ring	S-7	2					
50	Y 06022 02646	Starter Relay	KUBOTA 1J423-60231	1					
51	Y 06022 02646	Main Relay	KUBOTA 1J423-60231	1					
52	Y 00271 04015	Machine Screw		2					
53	Y 06018 06640	Fuse	65A	1					
54	Y 06018 72530	Fuse	45A	1					
55	Y 06022 02635	Glow Relay	KUBOTA RP421-53731	1					
56	Y 00271 04015	Machine Screw		1					
57	Y 06018 12626	Plug	19-09-2029	1					
58	Y 06018 12711	Pins (Male)	02-09-2103	2					
59	Y 06018 27656	Relay	LY-2D DC12V	1				RY2	
	Y 06018 23109	Base	PTF08A-E	1					
	Y 06018 24400	Clip	PYC-A1	2					
60	Y 00271 04020	Machine Screw		2					
61	M 12242 00004	Mounting Plate Indicator		1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	Y 06018 14114	LED	DUL-7HJTL R/C	1					
	Y 06018 14117	LED	DUL-7HJTL B/C	1					
	Y 06018 14116	LED	DUL-7HJTL O/C	6					
	Y 06018 31205	Push Button	SB-221	1					
62	Y 02070 06000	Self-Locking Nut		6					
63	Y 06018 51754	Grommet	C-30-SG-22A	1					
64	Y 06018 30710	Diagnostic Switch	S-301T	1					
65	M 12616 00004	Switch Bracket		1					
66	Y 00169 06015	Hex. Head Bolt		2					
67	Y 06018 03967	Load Bank Unit	L1032-R2 12kW	1					
67- 1	Y 06018 42562	Resistor		(1)					
67- 2	Y 06018 52062	LB Control Box		(1)					
68	M 13314 01103	PBS Bracket		1					
69	Y 00192 08020	Hex. Head Bolt		10					
70	Y 00192 08015	Hex. Head Bolt		4					
71	M 13314 01304	Terminal Cover		1					
72	Y 00192 06015	Hex. Head Bolt		4					
73	Y 00169 06015	Hex. Head Bolt		4					

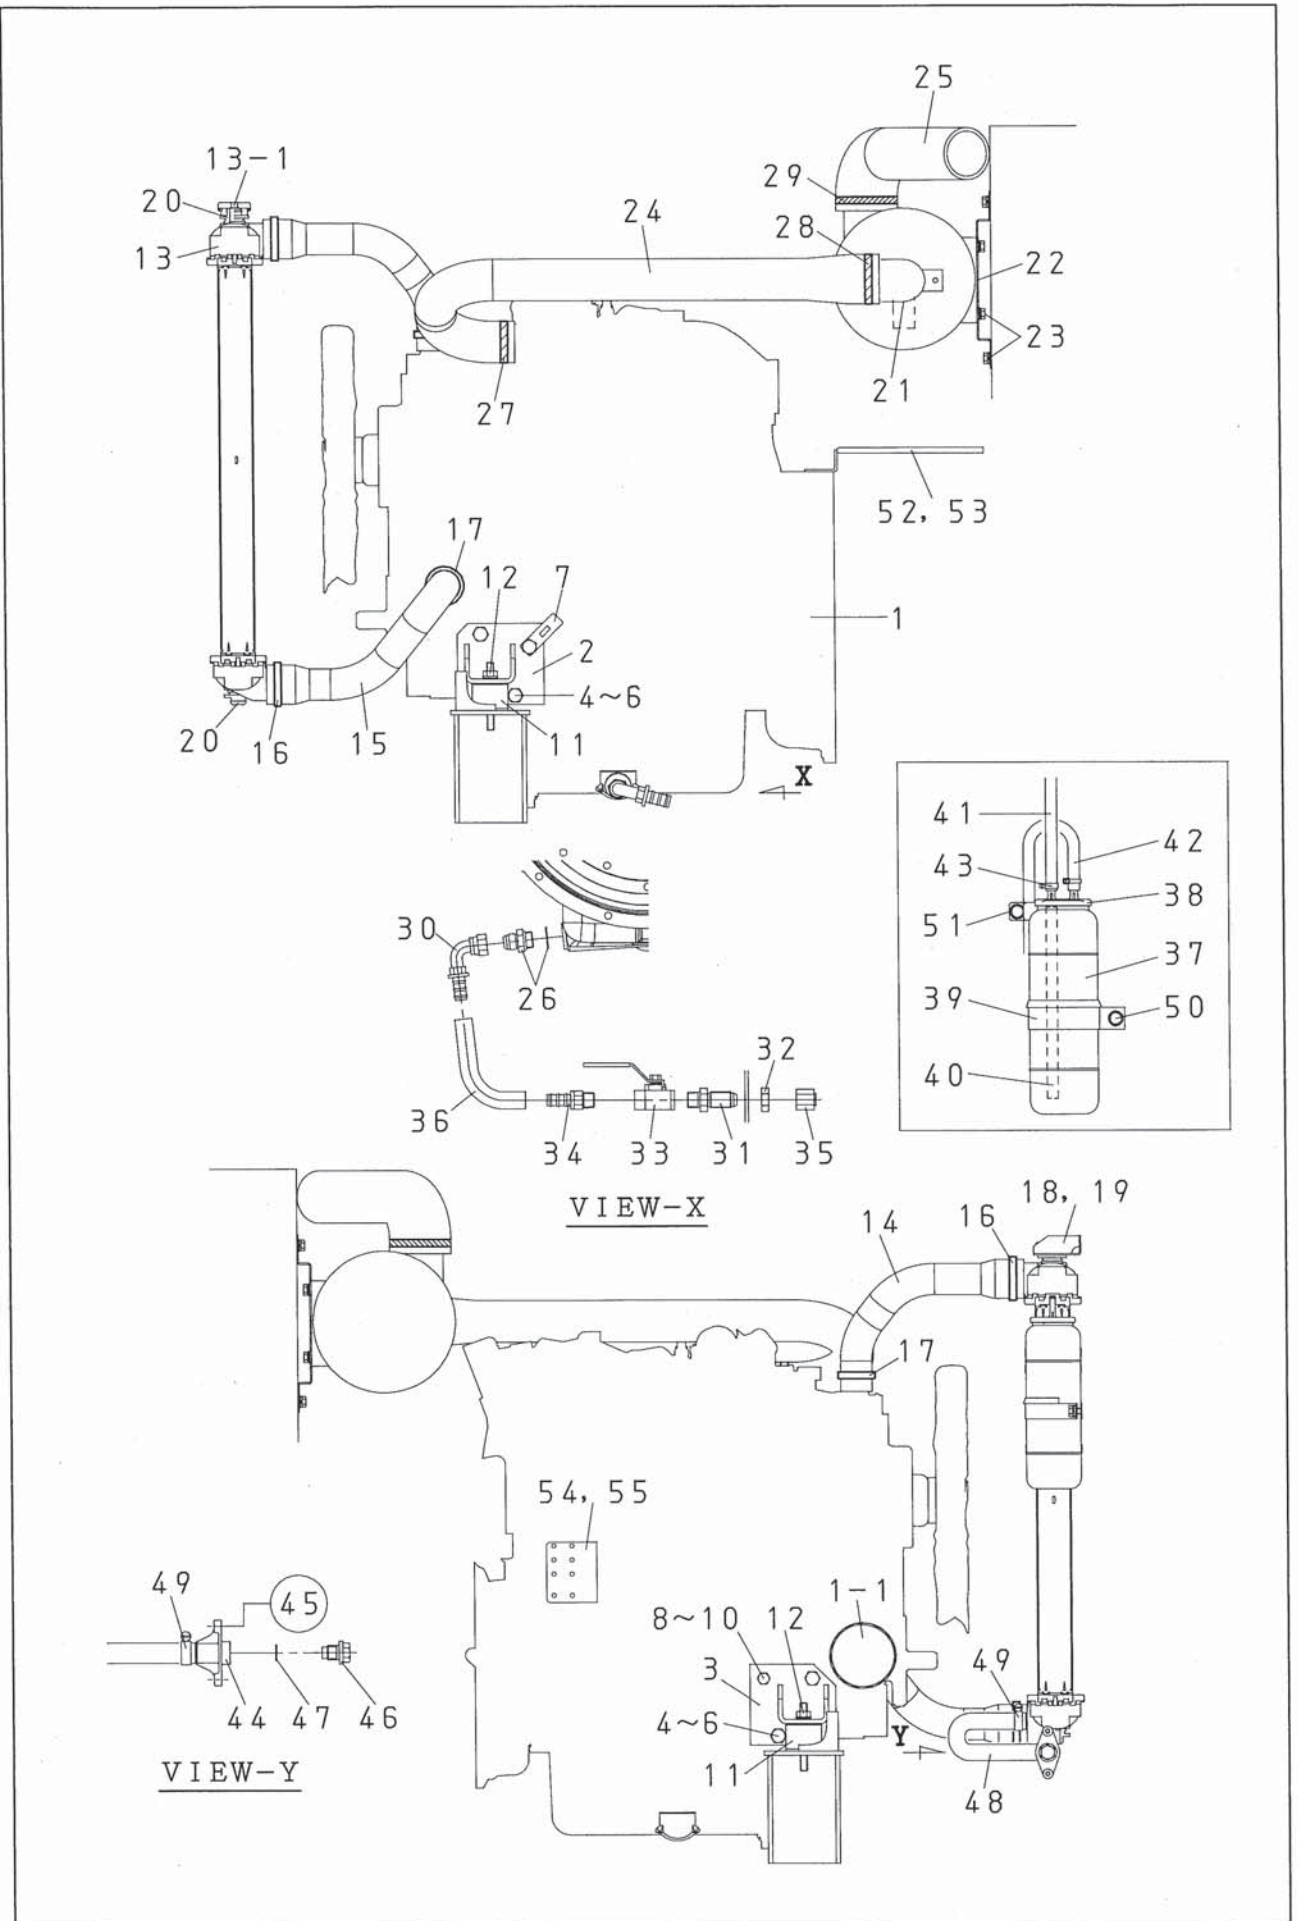

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 19242 00134	Engine	KUBOTA V2403-CR-T	1					
	Y 06020 15273	Fan Belt	KUBOTA 1G354-97011	(1)					
1- 1	Y 06020 41173	Cartridge, oil filter	KUBOTA 16414-32434	(1)					
2	M 13042 00204	Engine Foot		1					
3	M 13042 00304	Engine Foot		1					
4	Y 03493 12025	Hex. Head Bolt		7					
5	Y 00400 12000	Spring Washer		7					
6	Y 00412 12000	Plain Washer		7					
7	M 34836 00104	Coating Clamper		1					
8	Y 03494 10020	Hex. Head Bolt		1					
9	Y 00400 10000	Spring Washer		1					
10	Y 00412 10000	Plain Washer		1					
11	Y 06050 00409	Rubber Suspension	5040K	2					
12	Y 00300 10000	Self-Locking Nut		2					
13	M 19242 00144	Radiator	C281-015-0001	1					
13- 1	Y 06020 15700	Cap, radiator	C89C-002-5010	(1)					
14	M 13115 01203	Radiator Hose		1					
15	M 13115 01303	Radiator Hose		1					
16	Y 06055 15147	Hose Band	5032	2					
17	Y 06055 15149	Hose Band	5024	2					
18	M 13112 00804	Bracket, radiator		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
19	Y 00169 08020	Hex. Head Bolt		2					
20	M 93122 00104	Mount Rubber		4					
21	Y 06020 46570	Air Cleaner	KUBOTA 1J334-11011	1					
	Y 06020 47040	Air Flow Sensor	KUBOTA 1J520-10701	(1)					
22	M 13742 00304	Bracket, air cleaner		1					
23	Y 00169 08020	Hex. Head Bolt		4					
24	M 13741 01003	Air Cleaner Hose		1					
25	M 13741 01103	Air Cleaner Hose		1					
26	Y 06020 22568	Adapter	10M22×1.5 F80XS	1					
27	Y 06055 15147	Hose Band	5032	1					
28	Y 06055 15178	Hose Band	5044	1					
29	Y 06055 15146	Hose Band	5052	1					
30	Y 06020 22561	90° Elbow	33982-10-10+	1					
31	Y 06033 06590	Connector	10WFTX-S	1					
32	Y 06033 00285	Locknut	10WLN	1					
33	Y 06055 11395	Valve	XV500P-8	1					
34	Y 06033 06395	Hose Joint	30182-8-10	1					
35	Y 06020 21070	Cap	10FNTX-S	1					
36	Y 02692 00700	Drain Hose	836-10	1					
37	M 93000 00003	Reserve Tank		1					
38	M 93001 00003	Cap, reserve tank		1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
39	M 13171 00004	Bracket, reserve tank		1					
40	Y 01991 00215	Hose		1					
41	Y 01999 00400	Over Flow Hose		1					
42	Y 01936 01200	Over Flow Hose		1					
43	Y 06055 15189	Hose Band		2					
44	M 92000 00003	Drain Joint	ZDC-12	1					
45	Y 00169 06020	Hex. Head Bolt		2					
46	M 92002 00004	Drain Bolt		1					
47	Y 01500 00018	O Ring	P-18	1					
48	Y 02692 00650	Push-Lock Hose		1					
49	Y 06055 15198	Hose Band	5008	2					
50	Y 00169 08020	Hex. Head Bolt		1					
51	Y 06022 20911	Clamp	RCT-2010	2					
52	M 14846 00204	Clamp		1					
53	Y 03494 10020	Hex. Head Bolt		2					
	Y 00400 10000	Spring Washer		2					
	Y 00412 10000	Plain Washer		2					
54	M 14845 00404	Bracket, connector		1					
55	Y 00169 08020	Hex. Head Bolt		2					

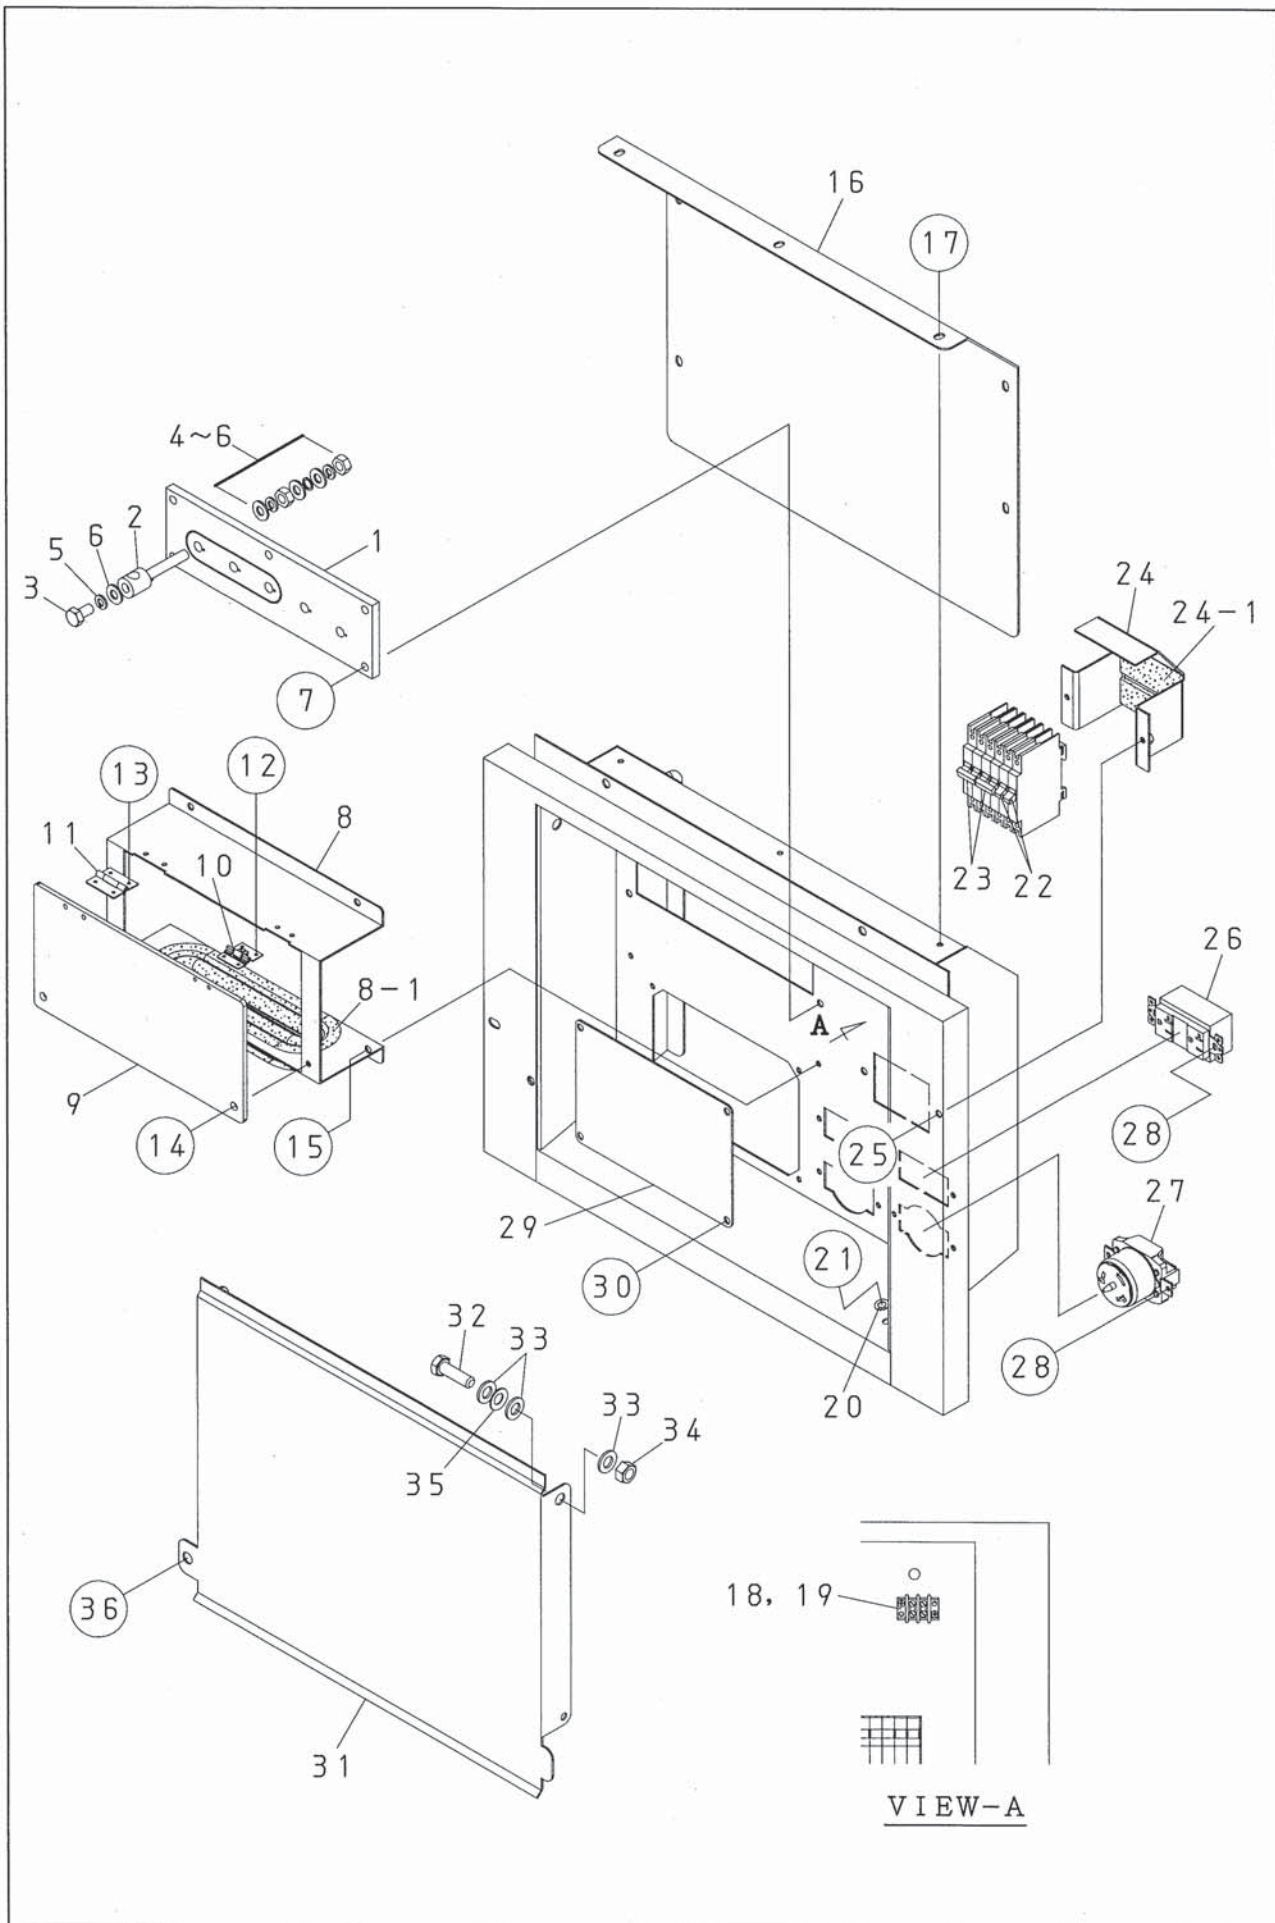


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 12307 00103	Terminal Panel		1					
2	M 92201 00204	Output Terminal Bolt		5					
3	M 92201 00104	Tie Bolt		5					
4	Y 00393 10000	Hex. Nut		10					
5	Y 00400 10000	Spring Washer		15					
6	Y 00414 10000	Plain Washer		20					
7	Y 00169 08025	Hex. Head Bolt		5					
8	M 12361 02023	3-Phase Output Terminal Cover		1					
8- 1	Y 03177 00480	Cushion Rubber		1					
9	M 12361 02124	Output Window		1					
10	Y 06050 12028	Hinge	B-1109-3	1					
11	Y 06050 10040	Hinge	TH-TM122	1					
12	Y 00271 03010	Machine Screw		4					
	Y 00300 03000	Hex. Nut		4					
	Y 00412 03000	Plain Washer		2					
13	Y 00271 03010	Machine Screw		4					
	Y 00300 03000	Hex. Nut		4					
	Y 00412 03000	Plain Washer		2					
14	Y 00169 06020	Hex. Head Bolt		2					
15	Y 00169 06015	Hex. Head Bolt		4					
16	M 12361 01814	Terminal Cover		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
17	Y 00169 06015	Hex. Head Bolt		7					
18	Y 06018 15194	Terminal Block	601-GP-02	1				TB1	
19	Y 00272 04015	Machine Screw		2					
20	Y 00405 08000	Toothed Washer		1					
21	Y 00192 08020	Hex. Head Bolt		1					
22	Y 06018 70440	Circuit Breaker	QCF 1020 1P 20A	2				CB4, 5	
23	Y 06018 70441	Circuit Breaker	QCF 2050 2P 50A	2				CB2, 3	
24	M 12607 00404	Breaker Fitting Cover		1					
24- 1	Y 02221 00080	Cushion Rubber		2					
25	Y 00169 06020	Hex. Head Bolt		2					
26	Y 06018 14013	Receptacle	GF20LA 125V 20A × 2	2				CON3, 4	
27	Y 06018 14014	Receptacle	GS6369L 250V 50A	2				CON1, 2	
28	Y 00271 04015	Machine Screw		8					
	Y 02070 04000	Hex. Nut		8					
29	M 12364 00104	Cover		1					
30	Y 00169 06015	Hex. Head Bolt		4					
31	M 12361 01904	Terminal Cover		1					
32	Y 00101 12045	Hex. Head Bolt		2					
33	Y 00412 12000	Plain Washer		6					
34	Y 00300 12000	Hex. Nut	double nut	2					
35	Y 06050 50060	Conical Spring Washer		2					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
36	Y 00192 08020	Hex. Head Bolt		1					

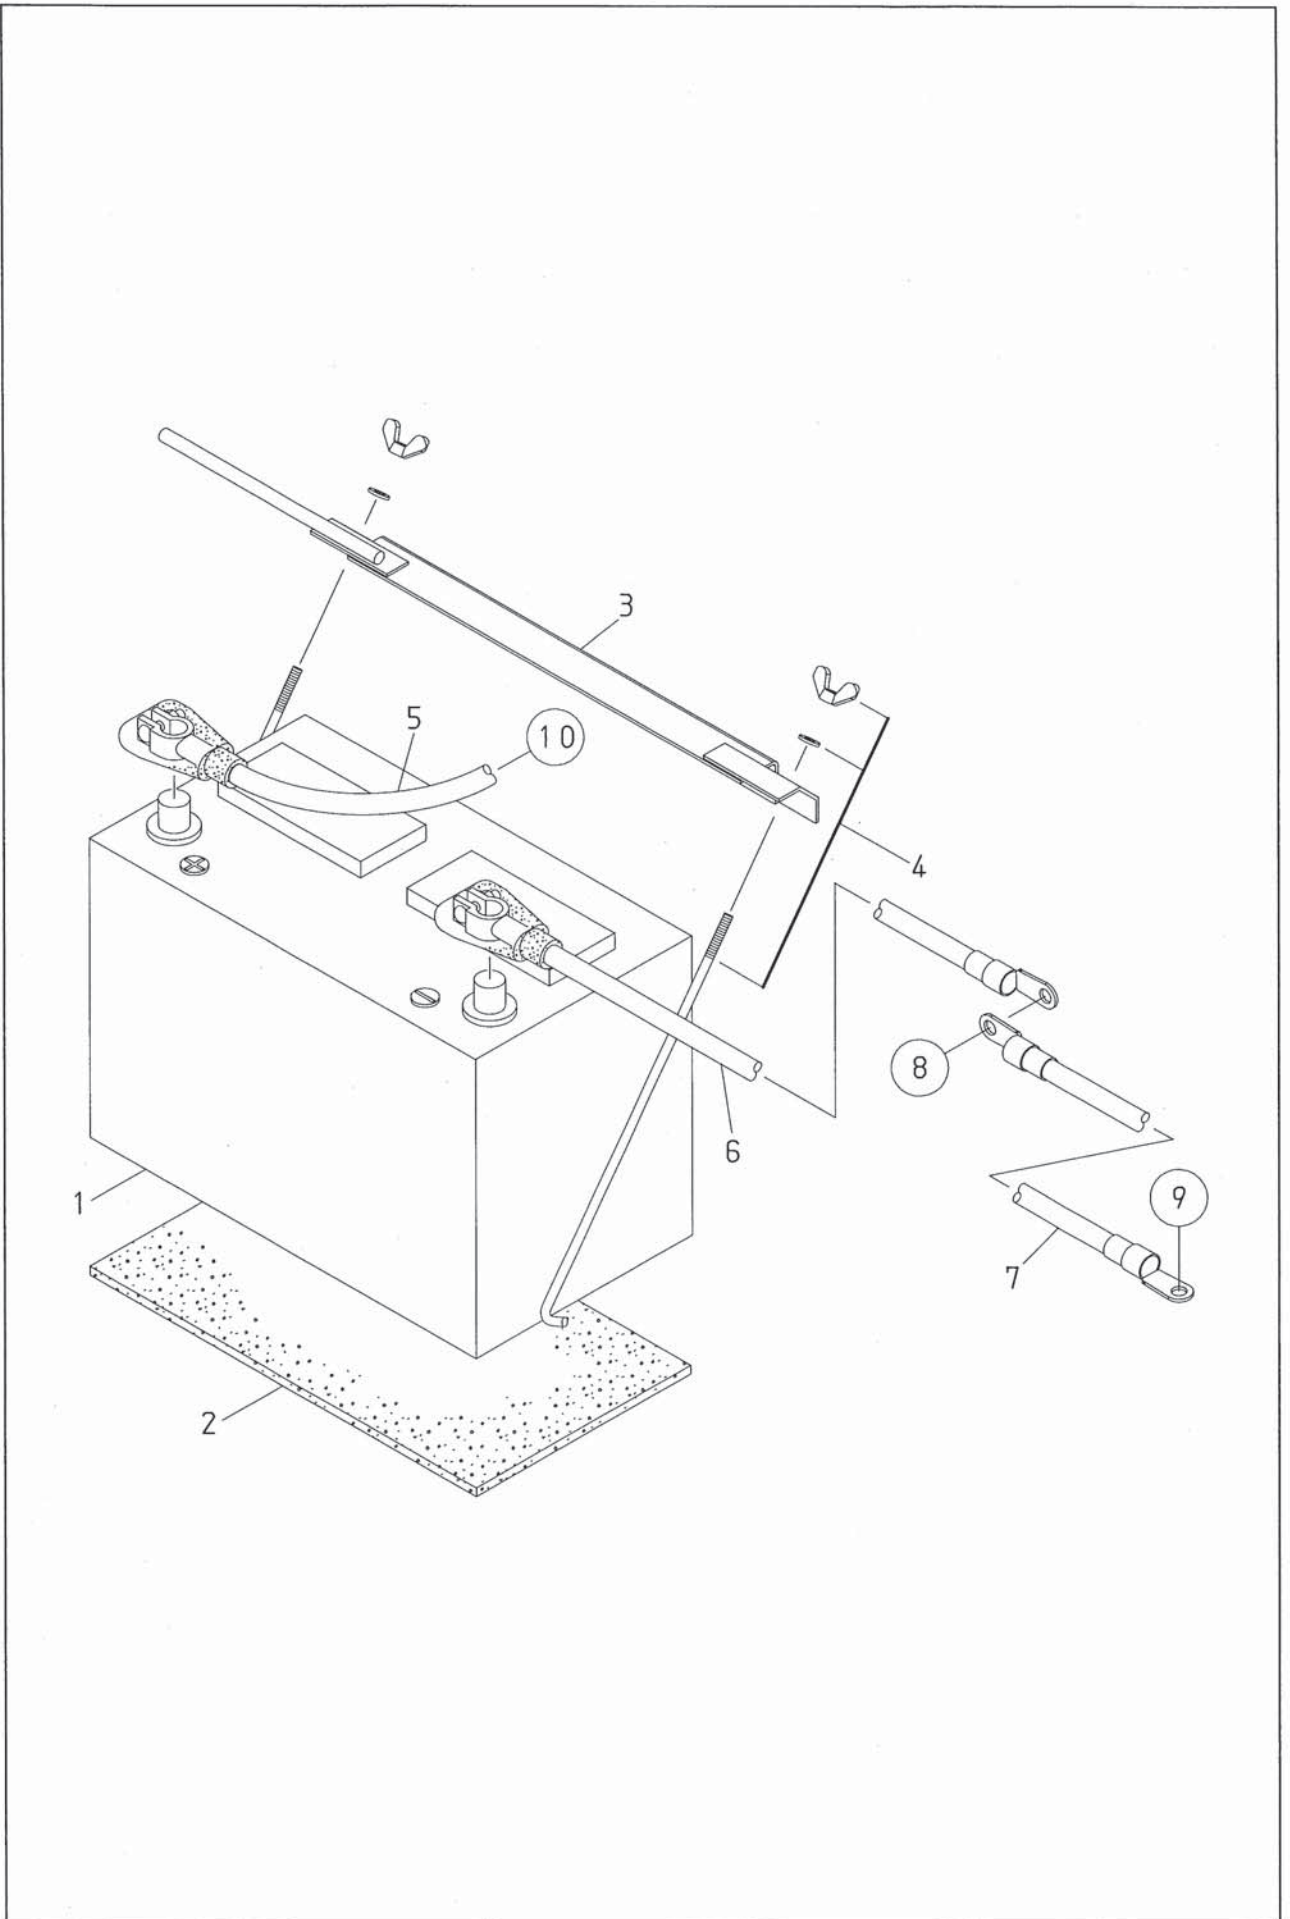


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	Y 06022 20199	Battery	727MF	1					
2	M 93105 00014	Battery Sheet		1					
3	M 91040 00104	Battery Band		1					
4	Y 06022 20920	Battery Bolt Set	BHL-10J 1/4-L10"	2					
5	M 13472 00304	Battery Cable		1					
6	M 13472 00404	Battery Cable		1					
7		Cable		1					
8	Y 03494 12025	Hex. Head Bolt		1					
	Y 00400 12000	Spring Washer		1					
	Y 00412 12000	Plain Washer		1					
	Y 00405 12000	Toothed Washer		1					
9	Y 00169 08020	Hex. Head Bolt		1					
	Y 00405 08000	Toothed Washer		1					
10	Y 02070 08000	Self-Locking Nut		1					

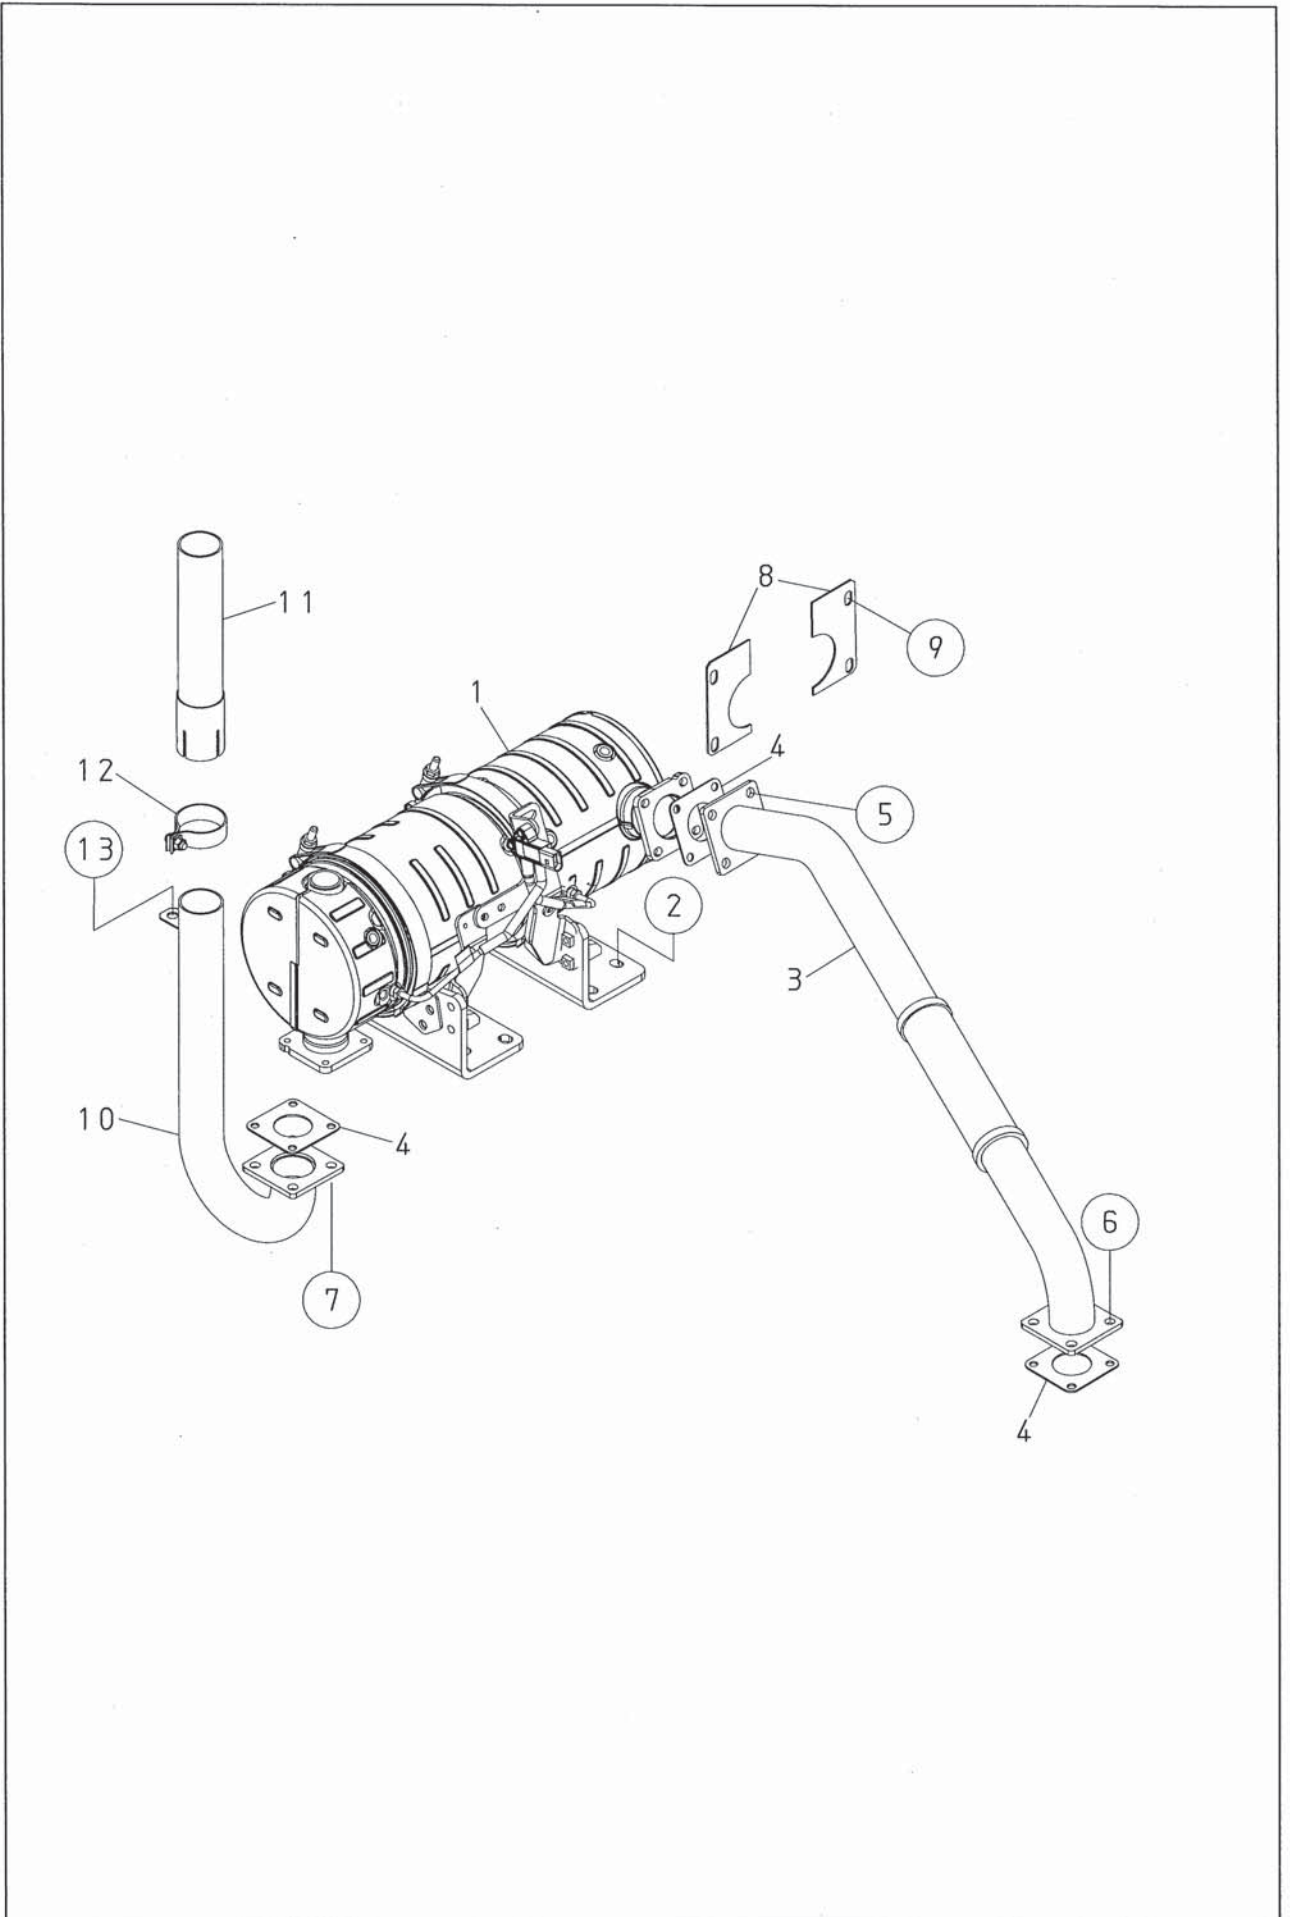

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	Y 06023 30120	DPF	KUBOTA 1J334-18053	1					
2	Y 00171 12030	Hex. Head Bolt		4					
	Y 00300 12000	Hex. Nut		4					
	Y 00412 12000	Plain Washer		4					
3	M 13340 00903	Exhaust Pipe		1					
	Y 06023 11142	Exhaust Insulating Mat	82234	1					
4	Y 06023 20154	Gasket	KUBOTA 17326-12231	3					
5	Y 00171 08030	Hex. Head Bolt		4					
	Y 02070 08000	Self-Locking Nut		4					
6	Y 02071 08000	Self-Locking Nut		4					
7	Y 00171 08030	Hex. Head Bolt		4					
8	M 14843 00004	Pipe Cover		2					
9	Y 00169 08020	Hex. Head Bolt		4					
10	M 13341 00003	Tail Pipe		1					
11	M 13341 00104	Tail Pipe		1					
12	Y 06023 25020	Pipe Band	A20AFE	1					
13	Y 00169 08020	Hex. Head Bolt		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 13640 00402	Fuel Tank		1					
1- 1	Y 06055 05070	Fuel Tank Cap		(1)					
1- 2	Y 06055 01072	Fuel Sender Unit		(1)					
	Y 06055 16090	Gasket		(1)					
	Y 00271 04015	Machine Screw		(5)					
2	M 13642 00004	Tank Band		2					
3	M 13632 00404	Tank Band		2					
4	M 93105 00104	Supporter Sheet		4					
5	Y 00169 08020	Hex. Head Bolt		4					
6	Y 02070 08000	Self-Locking Nut		4					
7	Y 06020 23232	Fuel Pump	KUBOTA R1401-51352	1					
8	Y 01913 01500	Hose		1					
9	Y 06055 15340	Hose Band	62P05	2					
10	Y 01912 00370	Suction Hose		1					
11	Y 01912 00470	Suction Hose		1					
12	Y 01910 01230	Return Hose		1					
13	Y 01912 00170	Suction Hose		1					
14	Y 01912 00940	Suction Hose		1					
15	Y 01912 01100	Suction Hose		1					
16	Y 01912 00560	Return Hose		1					
17	Y 06055 15189	Hose Band	6204	14					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
18	Y 00169 06015	Hex. Head Bolt		2					
19	Y 06020 42257	Water Separator	KUBOTA 1J430-43351	1					
	Y 06020 42752	Cartridge, water separator	KUBOTA 1J430-43061	(1)					
20	Y 00169 08030	Hex. Head Bolt		2					
21	Y 06020 42468	Fuel Filter	KUBOTA 1J800-43021	1					
	Y 06020 42554	Cartridge, fuel filter	KUBOTA 1J800-43171	(1)					
22	Y 00169 08035	Hex. Head Bolt		1					
23	Y 06020 42635	Air Bleeding Tank	KUBOTA TD350-42571	1					
24	Y 00169 06015	Hex. Head Bolt		2					

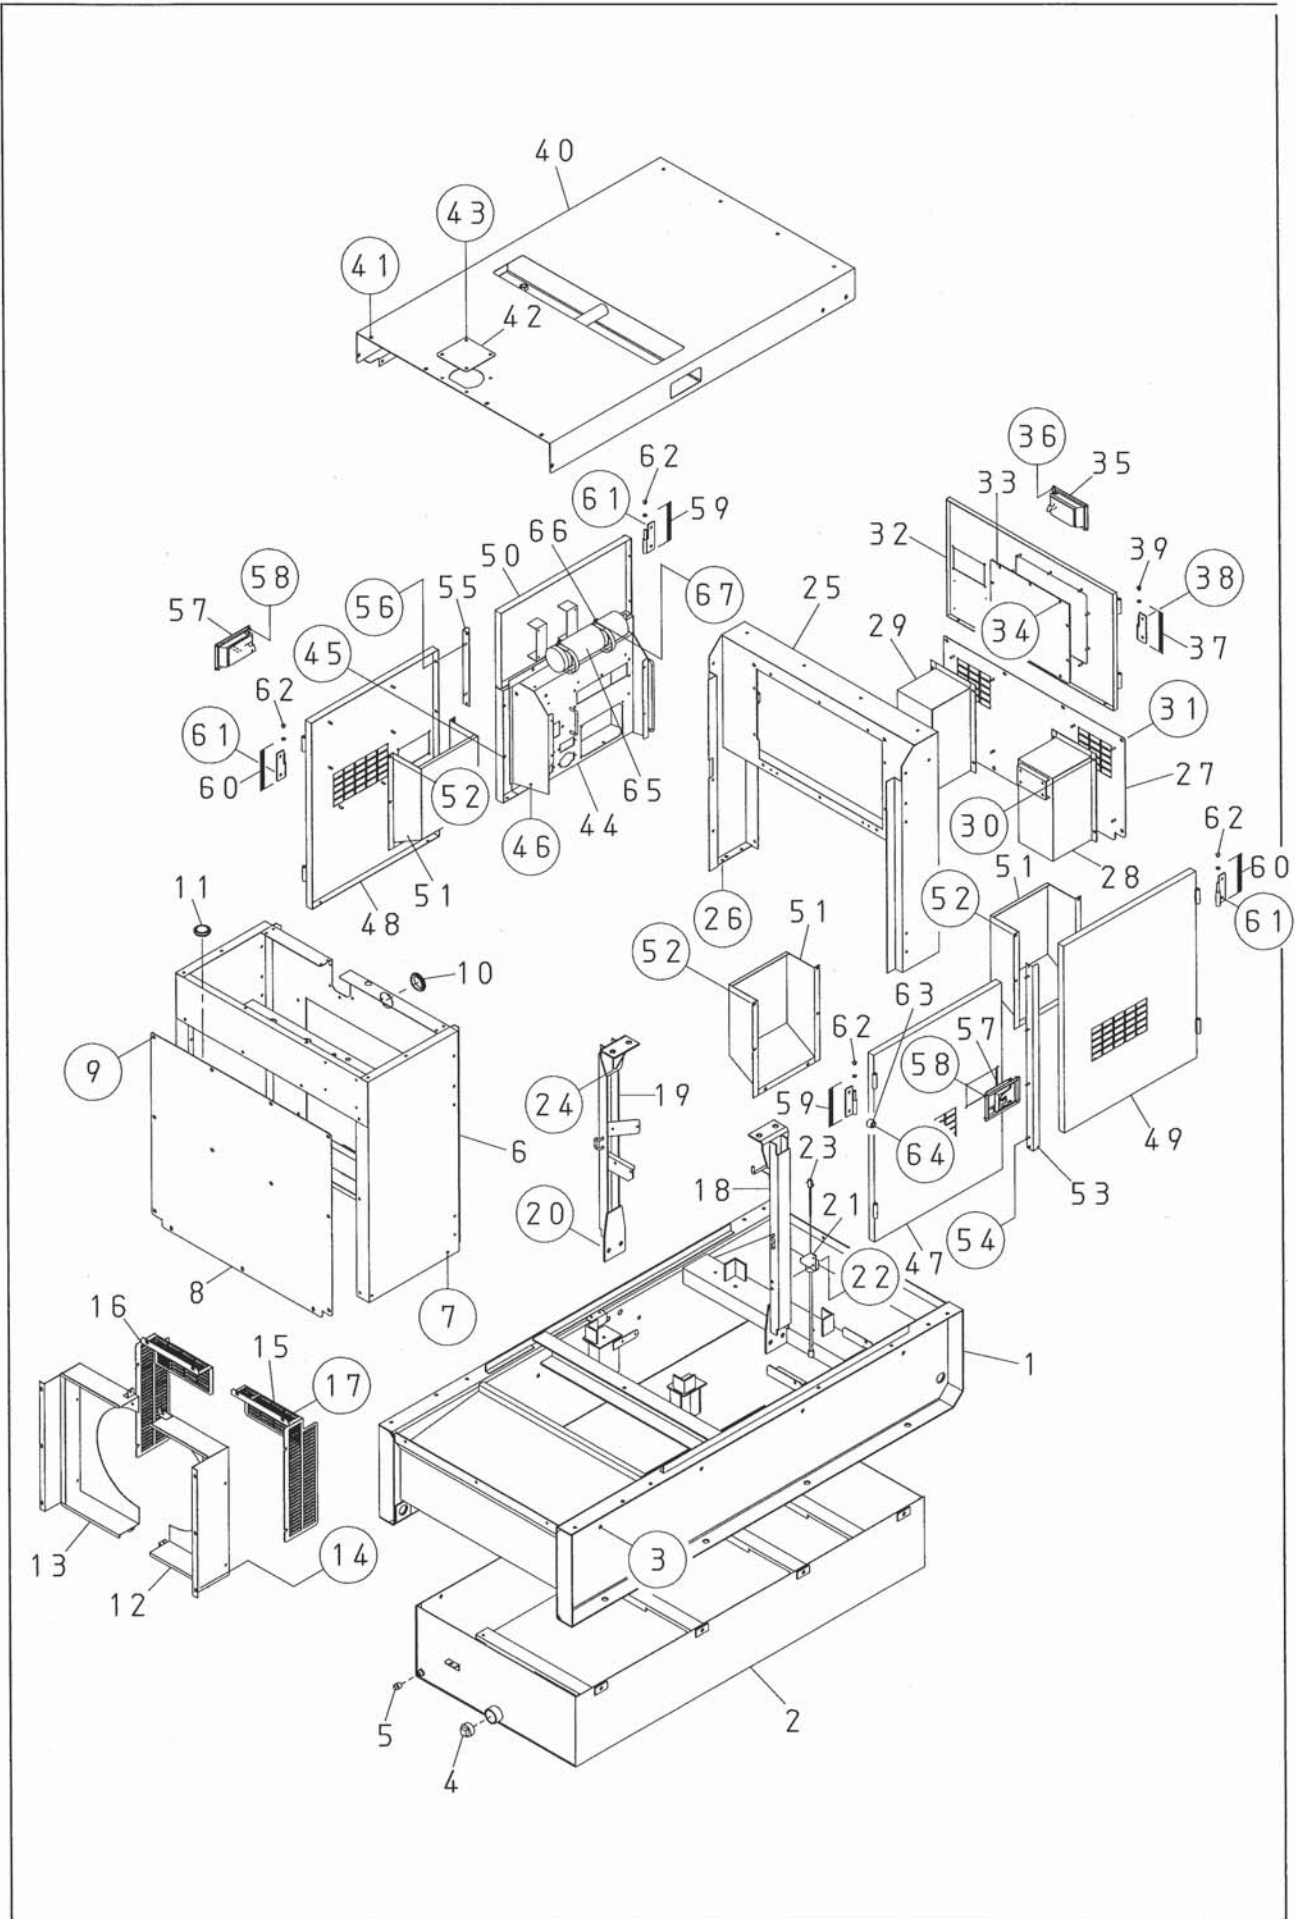


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 14140 00902	Base		1					
2	M 13643 00003	Environmental Tank		1					
3	Y 00169 10030	Hex. Head Bolt		8					
4	Y 06033 06797	Square Head Pipe Plug	1 1/2"	1					
5	Y 06033 06793	Square Head Pipe Plug	1/2"	1					
6	M 14240 01302	Front Frame		1					
	M 14941 05803	Acoustic Sheet		1					
7	Y 00169 08020	Hex. Head Bolt		4					
8	M 14242 01104	Cover, front frame		1					
	M 14941 05904	Acoustic Sheet		1					
9	Y 00192 08020	Hex. Head Bolt		13					
10	Y 06018 51736	Grommet	C-30-SG-60A	1					
11	Y 06018 51733	Grommet	C-30-SG-50A	1					
12	M 13113 01303	Fan Shroud		1					
13	M 13113 01403	Fan Shroud		1					
14	Y 00169 08020	Hex. Head Bolt		6					
15	M 13113 01503	Fan Guard		1					
16	M 13113 01603	Fan Guard		1					
17	Y 00169 08020	Hex. Head Bolt		8					
18	M 14343 00503	Center Frame		1					
19	M 14343 00603	Center Frame		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
20	Y 00136 16040	Hex. Head Bolt		4					
	Y 00400 16000	Spring Washer		4					
	Y 00412 16000	Plain Washer		4					
21	M 14845 00104	Fuel Leak Switch Bracket		1					
22	Y 00169 06020	Hex. Head Bolt		2					
23	Y 06055 03062	Fuel Leak Detected Switch		1					
24	Y 00136 16035	Hex. Head Bolt		4					
	Y 00400 16000	Spring Washer		4					
	Y 00412 16000	Plain Washer		4					
25	M 14440 00402	Rear Frame		1					
	M 14943 03404	Acoustic Sheet		1					
26	Y 00169 08020	Hex. Head Bolt		4					
27	M 14443 00703	Rear Cover		1					
	M 14943 03604	Acoustic Sheet		1					
28	M 14443 00803	Duct, rear cover		1					
	M 14943 03504	Acoustic Sheet		1					
29	M 14443 00903	Duct, rear cover		1					
	M 14943 03504	Acoustic Sheet		1					
30	Y 02070 06000	Self-Locking Nut		8					
31	Y 00192 08020	Hex. Head Bolt		8					
32	M 14442 00503	Rear Door		1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
33	M 14456 00204	Window Plate		1					
34	Y 00379 06000	Lock Nut		10					
	Y 00412 06000	Plain Washer		10					
35	Y 06050 12309	Door Handle Ass'y		1					
36	Y 02070 06000	Self-Locking Nut		4					
37	M 91101 00204	Hinge		2					
	M 91161 00004	Washer		2					
38	Y 00192 08020	Hex. Head Bolt		3					
39	M 93100 00004	Blind Plug		2					
40	M 14640 00402	Roof Panel		1					
	M 14945 02503	Acoustic Sheet		1					
41	Y 00192 08020	Hex. Head Bolt		14					
42	M 33106 00004	Cover		1					
43	Y 00192 08020	Hex. Head Bolt		4					
44	M 14542 00802	Splasher Panel		1					
45	Y 00192 08020	Hex. Head Bolt		2					
	Y 00191 08055	Hex. Head Bolt		2					
	Y 00423 08000	Spring Washer		2					
	Y 00424 08000	Plain Washer		2					
46	Y 00169 08020	Hex. Head Bolt		2					
47	M 14540 01803	Side Door		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	M 14944 05504	Acoustic Sheet		1					
48	M 14540 01903	Side Door		1					
	M 14944 05604	Acoustic Sheet		1					
49	M 14540 02003	Side Door		1					
	M 14944 05704	Acoustic Sheet		1					
50	M 14540 02103	Side Door		1					
	M 14944 05804	Acoustic Sheet		1					
51	M 14543 00804	Duct		3					
	M 14944 05904	Acoustic Sheet		3					
52	Y 02070 06000	Self-Locking Nut		18					
53	M 14547 00204	Door Supporter		1					
	Y 02292 00775	Rubber Seal		1					
54	Y 02070 06000	Self-Locking Nut		4					
55	M 14547 00404	Door Supporter		1					
	Y 02292 00295	Rubber Seal		1					
56	Y 02070 06000	Self-Locking Nut		2					
57	Y 06050 12309	Door Handle Ass'y		2					
58	Y 02070 06000	Self-Locking Nut		8					
59	M 91101 00204	Hinge		4					
	M 91161 00004	Washer		4					
60	M 91101 00304	Hinge		4					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	M 91161 00004	Washer		4					
61	Y 00192 08020	Hex. Head Bolt		9					
62	M 93100 00004	Blind Plug		8					
63	Y 06018 50097	Door Stopper		8					
64	Y 00272 08025	Machine Screw		8					
65	Y 06008 00321	Manual Pak	9000-14	1					
66	M 14836 00804	Clamper		2					
67	Y 00169 06015	Hex. Head Bolt		4					

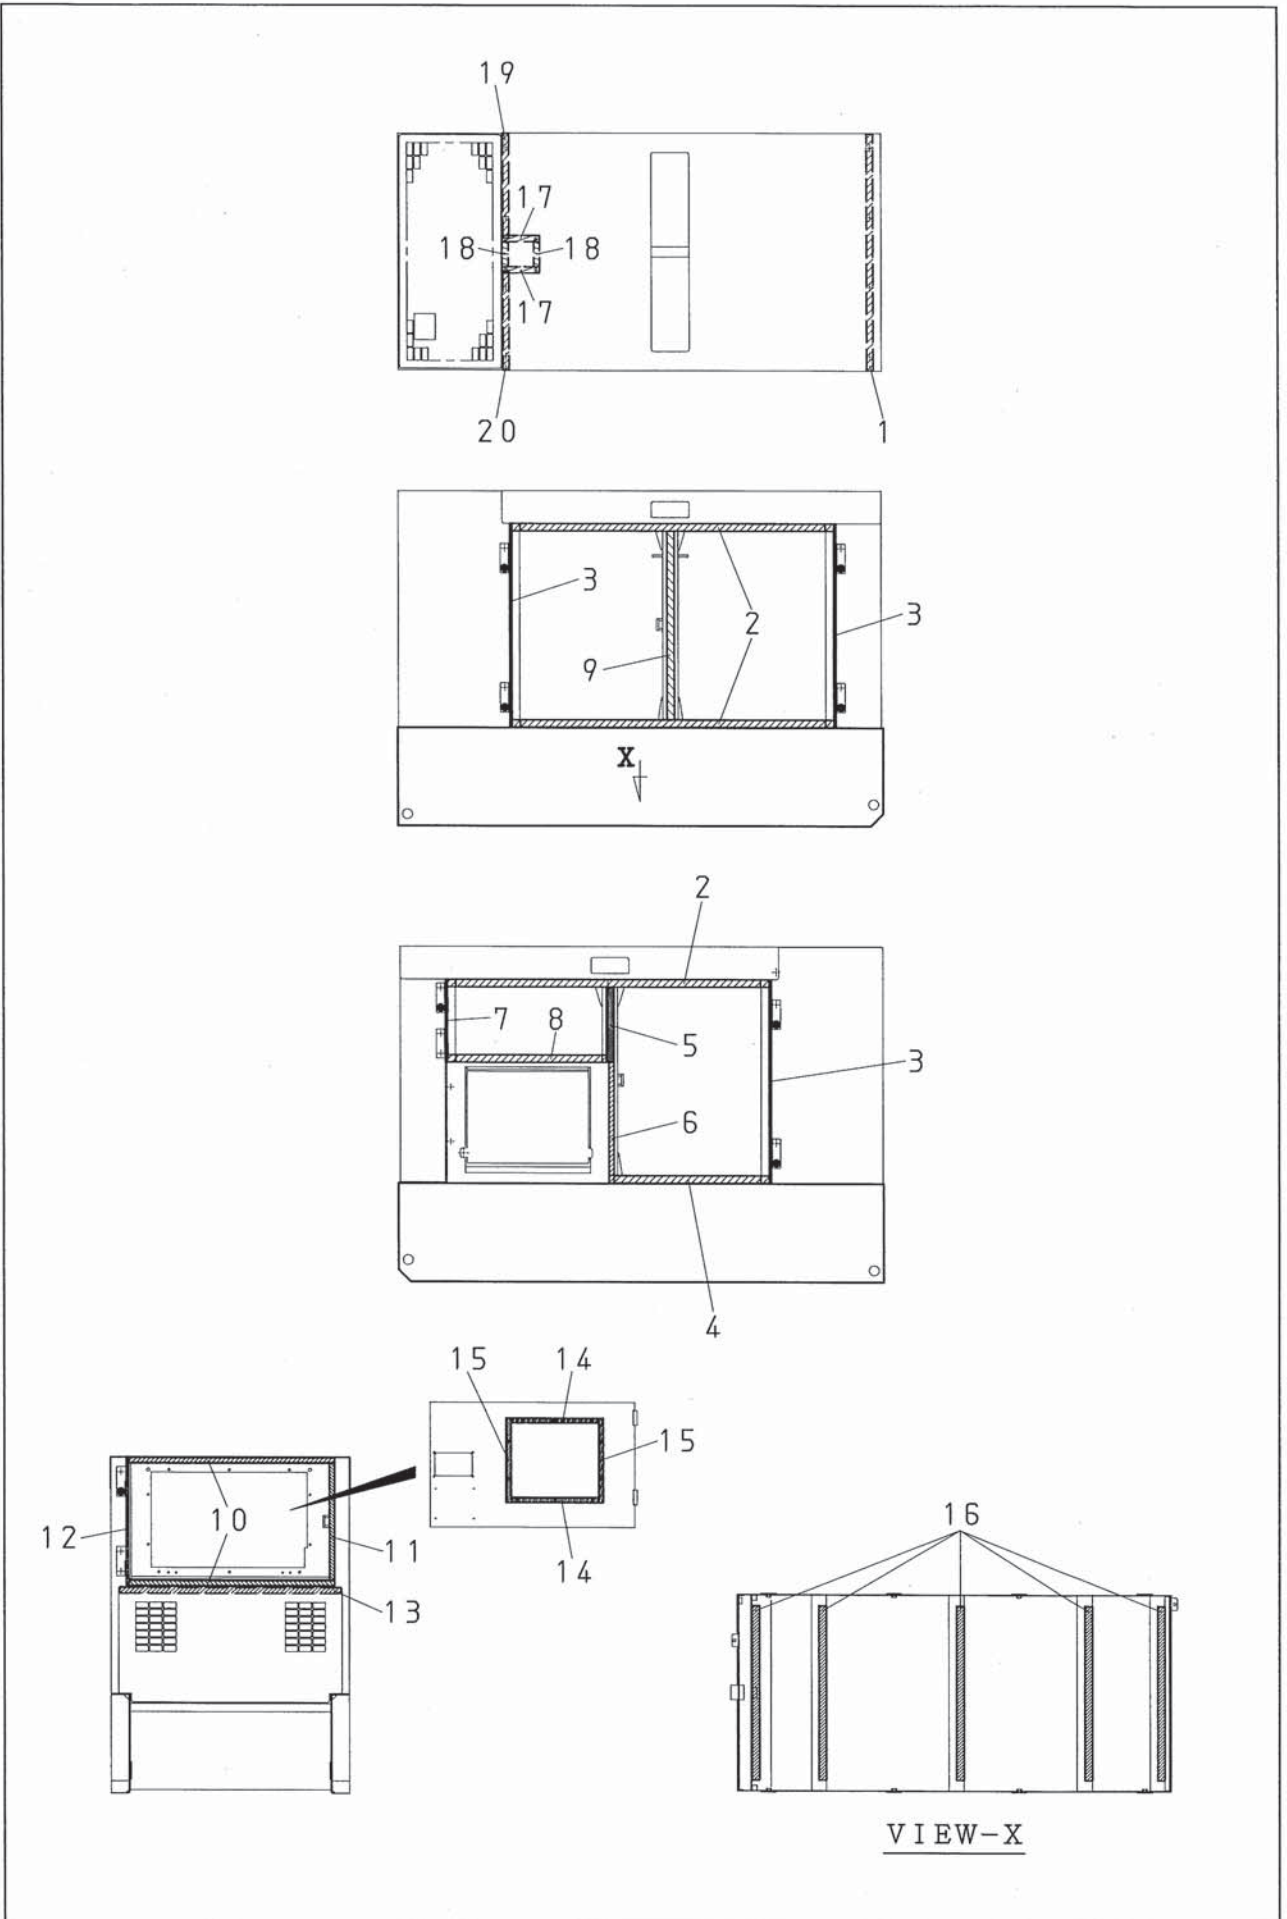

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	Y 02292 00950	Rubber Seal		1					
2	Y 02289 01285	Rubber Seal		3					
3	Y 02294 00820	Rubber Seal		3					
4	Y 02289 00620	Rubber Seal		1					
5	Y 02289 00305	Rubber Seal		1					
6	Y 02288 00490	Rubber Seal		1					
7	Y 02294 00335	Rubber Seal		1					
8	Y 02289 00635	Rubber Seal		1					
9	Y 02289 00760	Rubber Seal		1					
10	Y 02288 00820	Rubber Seal		2					
11	Y 02288 00470	Rubber Seal		1					
12	Y 02288 00510	Rubber Seal		1					
13	Y 02292 00880	Rubber Seal		1					
14	Y 02281 00340	Rubber Seal		2					
15	Y 02281 00350	Rubber Seal		2					
16	Y 02221 00700	Rubber Seal		5					
17	Y 02292 00145	Rubber Seal		2					
18	Y 02292 00100	Rubber Seal		2					
19	Y 02292 00420	Rubber Seal		1					
20	Y 02292 00400	Rubber Seal		1					

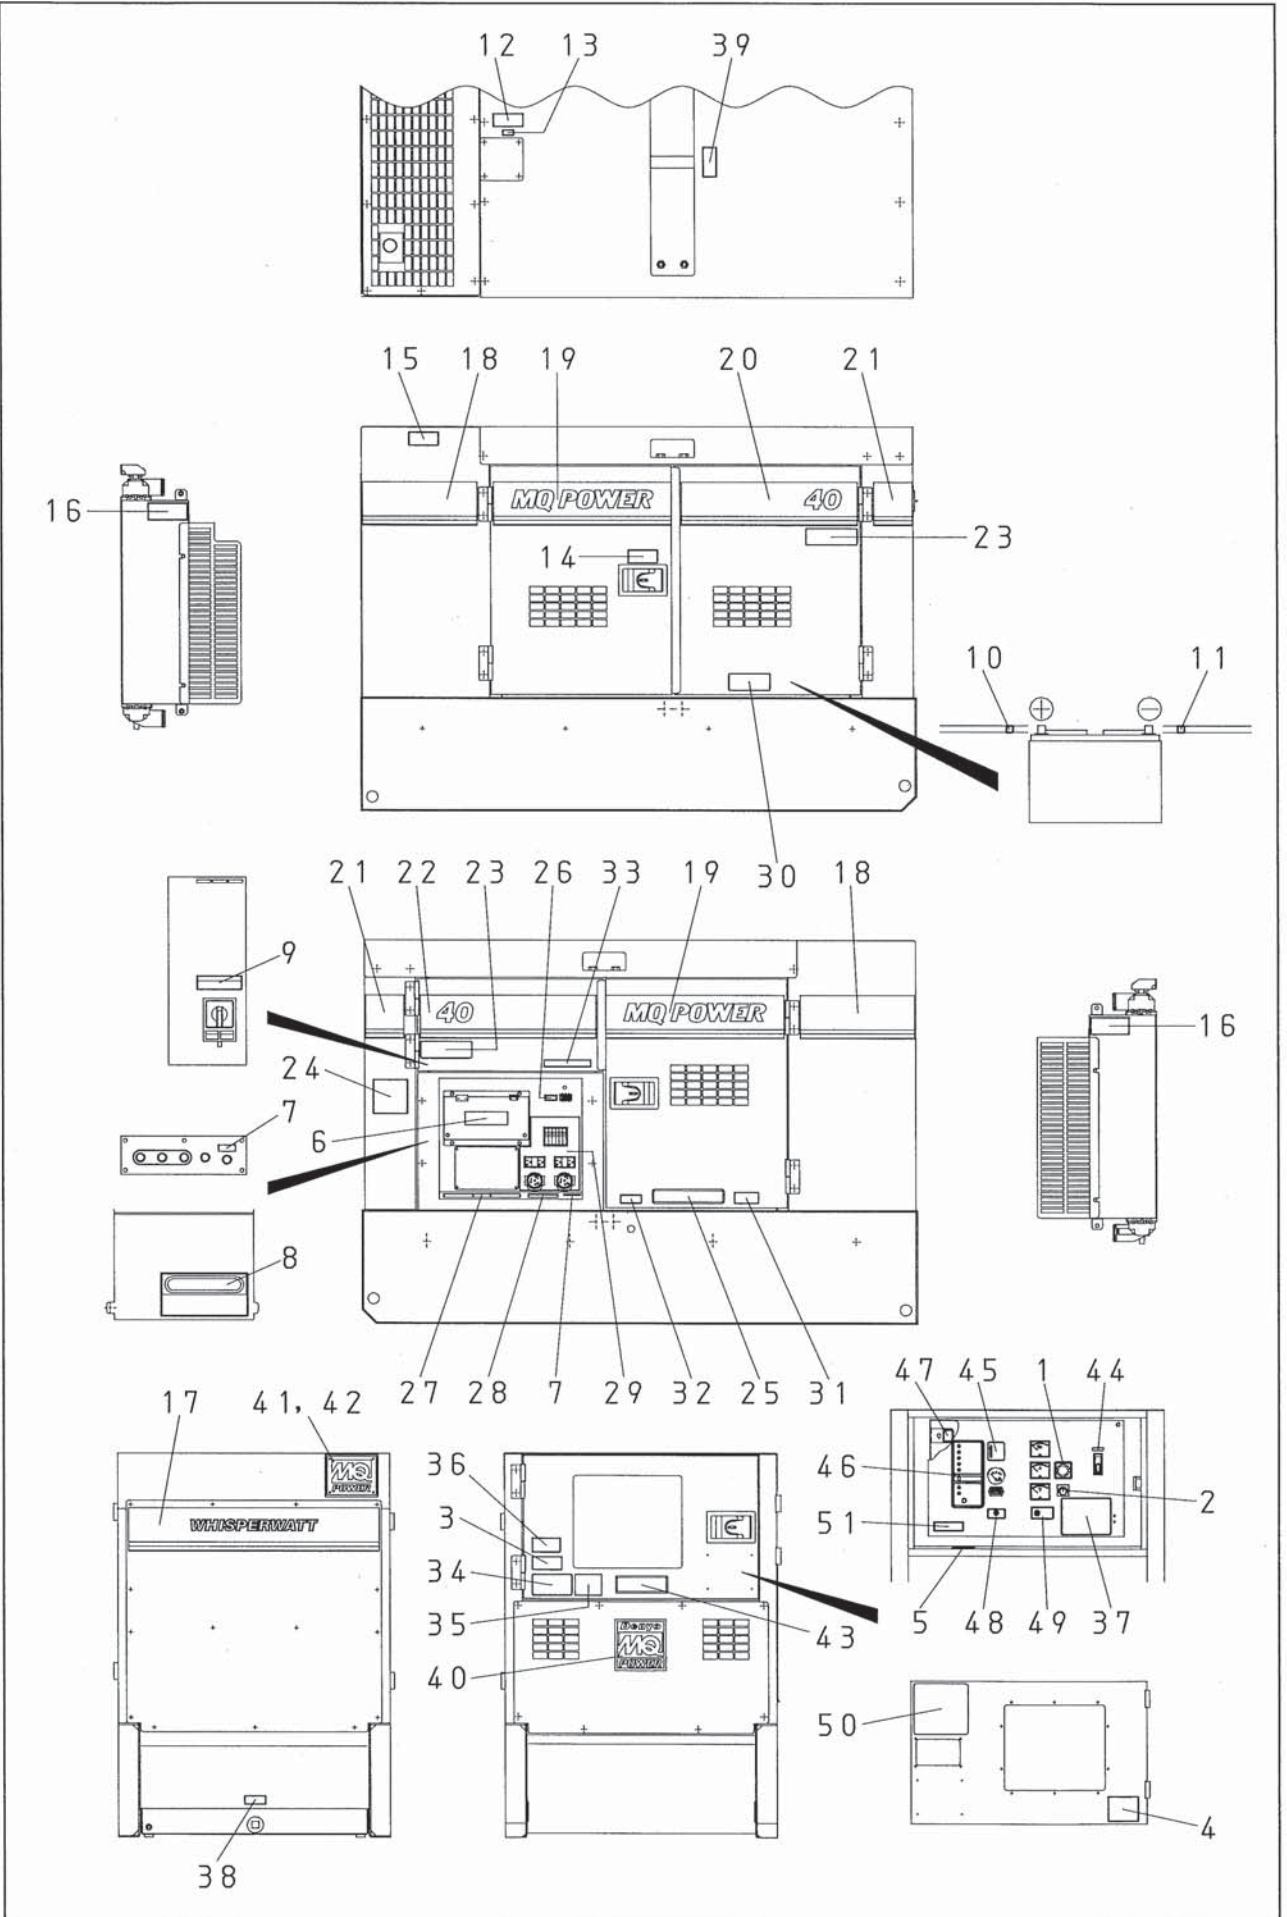

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 95200 00104	Decal;Ammeter Change-Over Sw.	M9200 0010	1					
2	M 95220 00604	Decal;Voltage Regulator	M9220 0060	1					
3	M 95201 00704	Decal;Warning Arc Flash	M9201 0070	1					
4	M 95201 00304	Decal;General Cautions	M9201 0030	1					
5	M 95201 00004	Decal;Warning Electrical Shock	M9201 0000	1					
6	M 95202 00003	Decal;Connection of Output Cable	M9202 0000	1					
7	M 95200 00004	Decal;Grounding	M9200 0000	2					
8	M 95201 00404	Decal;Danger High Voltage	M9201 0040	1					
9	M 95201 00204	Decal;Caution Change-Over Sw.	M9201 0020A	1					
10	M 95003 00104	Decal;+	M9003 0010	1					
11	M 95003 00004	Decal;-	M9003 0000	1					
12	M 95031 00004	Decal;Warning Radiator Cap	M9031 0000	1					
13	M 95001 00004	Decal;Water	M9001 0000	1					
14	M 95101 00004	Decal;Caution High Temp.	M9101 0000	1					
15	M 95032 00004	Decal; Warning Exhaust Gas	M9032 0000	1					
16	M 95030 00004	Decal;Warning Rotating Part	M9030 0000	2					
17	M 15601 00603	Stripe		1					
18	M 15611 02404	Stripe		2					
19	M 15611 02503	Stripe		2					
20	M 15611 02603	Stripe		1					
21	M 15611 01504	Stripe		2					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
22	M 15611 02703	Stripe		1					
23	M 95201 00603	Decal:Warning Auto Start	M9201 0060	2					
24	M 15510 01204	Decal:Notice Load Sharing	M1510 0120	1					
25	M 95030 00103	Decal:Daily Check Water and Oil	M9030 0010	1					
26	M 95200 00504	Decal:Start Contact	M9200 0050	1					
27	M 95201 00503	Decal: Warning	M9201 0050	1					
28	M 95111 00104	Decal:Notice Receptacle	M9111 0010	1					
29	M 15500 01803	Decal:Auxiliary Outputs	M1500 0180	1					
30	M 95101 00403	Decal:Warning Battery Connect	M9101 0040A	1					
31	M 95015 00004	Decal: Diesel Fuel	M9015 0000	1					
32	M 95000 00004	Decal:Oil Drain	M9000 0000	1					
33	M 95100 00104	Decal:Document Box Located	M9100 0010	1					
34	M 95111 00004	Decal:Warning Environmental	M9111 0000	1					
35	M 95032 00104	Decal:Danger EX. Gas (Indoor)	M9032 0010	1					
36	M 95042 00004	Decal:Warning Start Fires	M9042 0000	1					
37	M 25500 02303	Decal:Operating Procedures	M2500 0230	1					
38	M 95100 00004	Decal:Fluid Drain	M9100 0000	1					
39	M 15500 01504	Decal:Caution Lifting Capacity	M1500 0150	1					
40	M 95112 00204	Sticker, MQ	M9112 0020	1					
41	Y 06005 00092	Emblem		1					
42	Y 00211 06015	Machine Screw		4					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
43	M 95112 00103	TIER 4F	M9112 0010	1					
44	M 95220 00504	Decal:Circuit Breaker	M9220 0050	1					
45	M 95210 00704	Decal:CAN7X	M9210 0070	1					
46	M 95210 00603	Decal:Warning Lamp Panel	M9210 0060	1					
47	M 95200 00904	Decal:Diagnostic Switch	M9200 0090	1					
48	M 95044 00104	Decal:Auto-Manual Switch	M9044 0010	1					
49	M 95210 00804	Decal:Engine Speed & DPF Control	M9210 0080	1					
50	M 15510 01103	Decal:DPF Regen Procedures	M1510 0110	1					
51	M 15610 00104	Sticker, 36kVA	M1610 0010	1					

MANUFACTURED FOR MULTIQUIP INC.
by
DENYO MANUFACTURING CORP.



MULTIQUIP INC.
Post Office Box 6254 • Carson, Ca. 90749
18910 Wilmington Av. • Carson, Ca. 90746
Phone. (310)537 3700 • (800)421 1244
Fax. (310)632 2656